




977-307

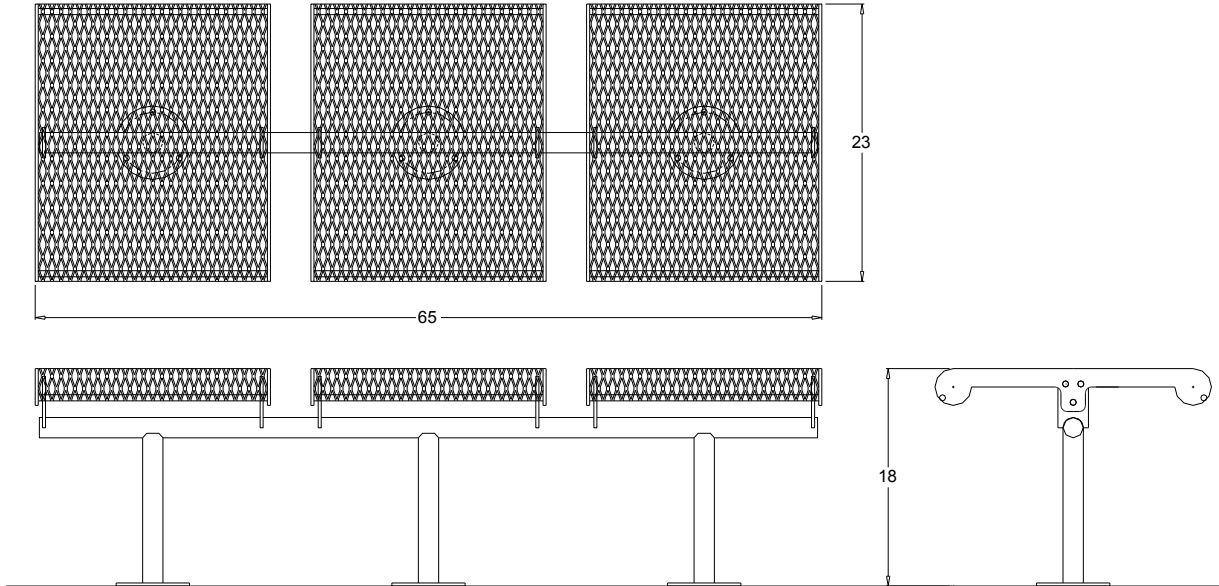

Part No.	Description	Qty.
652-111	Contour Single Flat Seat	3
652-136	3 Seat Inline Support Frame Surface Mount	1
516-045	3/8" X 1-1/4" SS Btn Skt Cap Scr.	18
516-028	3/8" SS Nylock Nut	18
516-023	3/8" SS Washer	36

- 1 Position the support frame in the desired location and anchor it to the concrete.
- 2 Drill plastic out of the mounting holes on the seats and stand using a 7/16" dia. drill bit.
- 3 Fasten the seats to the stand loosely.
- 4 Make sure that the three seats are level with each other and tighten all of the bolts.

In Accordance to California law: WARNING This product contains a chemical know to the State of California to cause cancer and birth defects or other reproductive harm.

Periodic check of bolt tightness recommended.



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

