




934-601

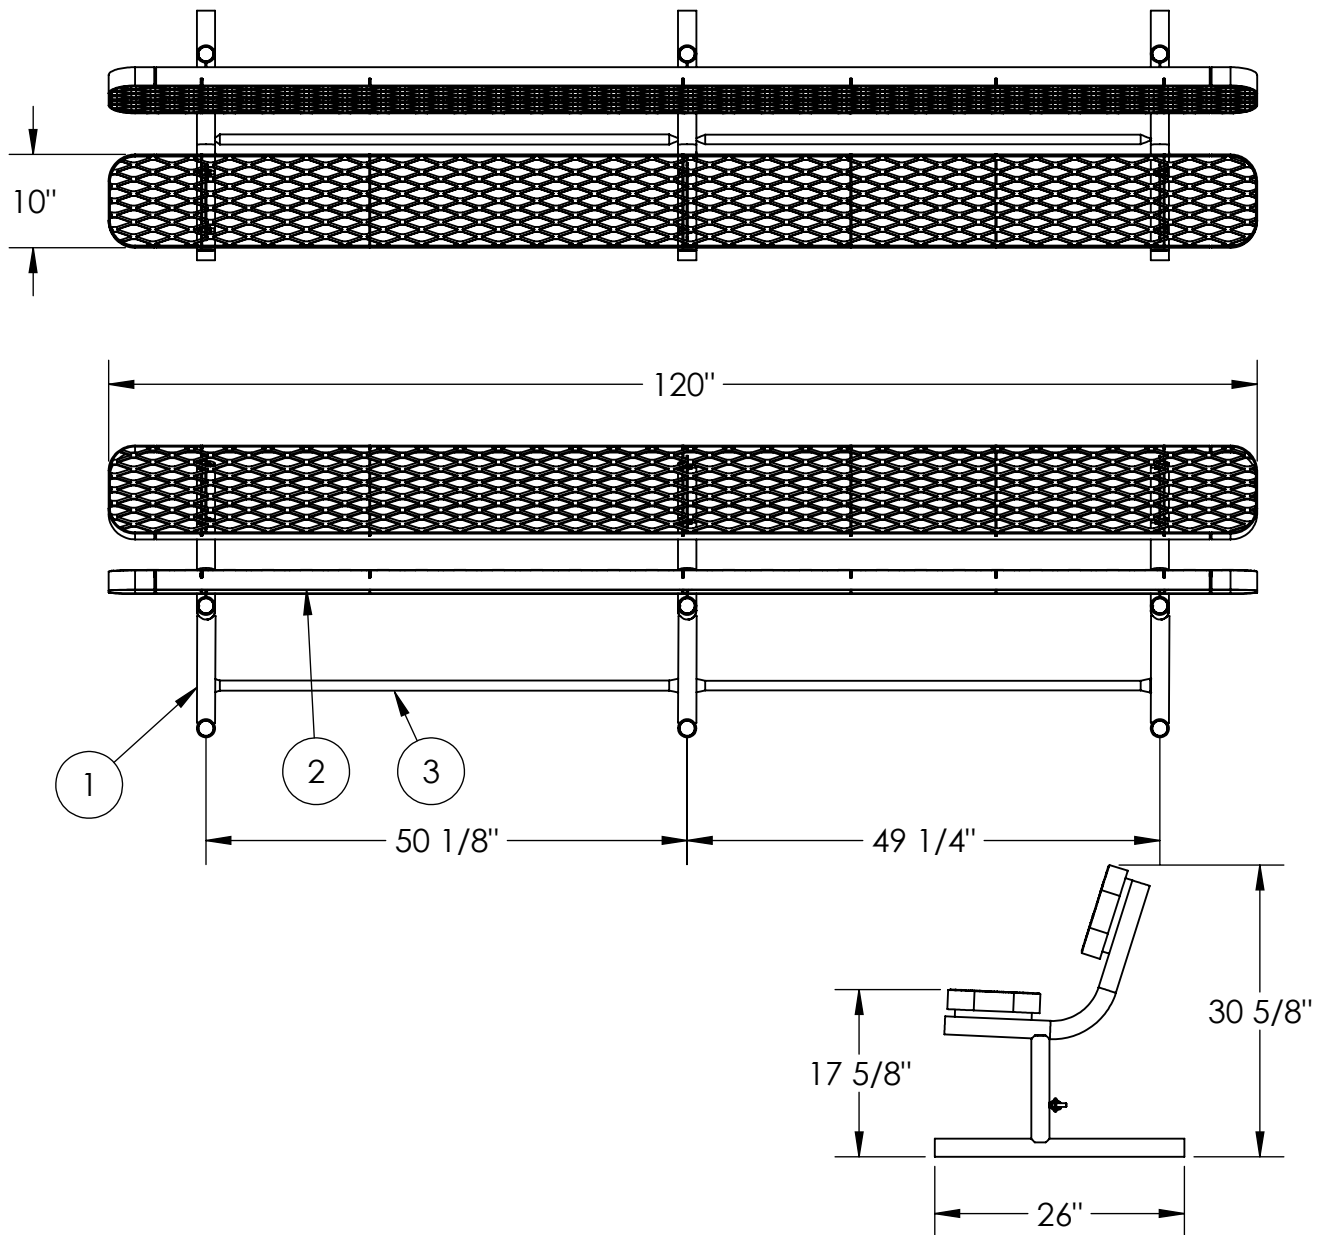


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	630-010	Bench With Back stand FS	3
2	622-016	10' Champion Seat/Back	2
3	630-016	10' Bench with Back Brace	1
4	516-058	3/8"x1-1/2" SS Hex Bolt	12
5	516-028	3/8" SS Nylock Nut	15
6	516-023	3/8" SS Flat Washer	27

**PREMIER POLYSTEEL**

The Best Commercial Outdoor Furniture Available. Period.

SIZE
A

Sheet 1 OF 2

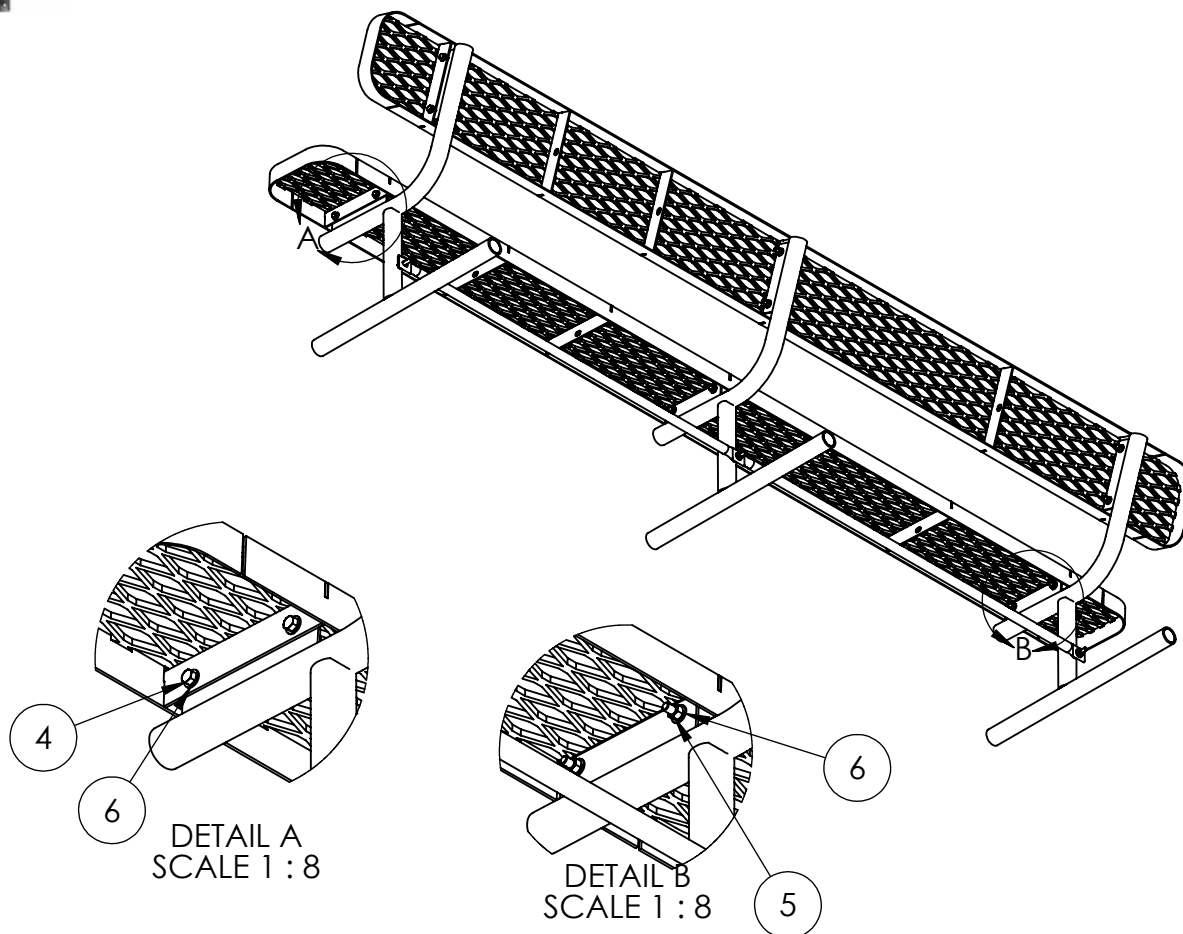

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Impact Gun (Optional)
- Drill

This product uses Hardware Pack HWPK07
(you may receive extra hardware)

- 12 qty. 3/8" x 1-1/2" SS Hex Bolt
- 15 qty. 3/8" SS Nylock Nut
- 27 qty. 3/8" SS Flat Washer

1. Drill plastic out of the mounting holes on the seat, back and stands using a 7/16" diameter drill bit.
2. Bolt the seat to the stand and braces loosely using fixings provided. Set on level surface and tighten up.

Periodic check of bolts tightness recommended



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

