



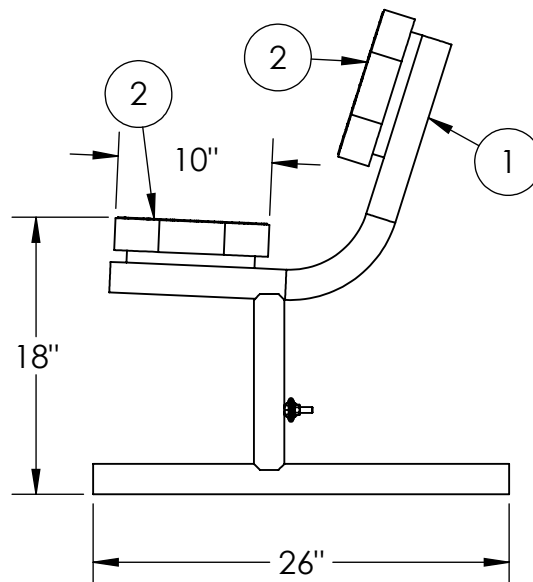

6' Champion with Back Free Standing

934-301

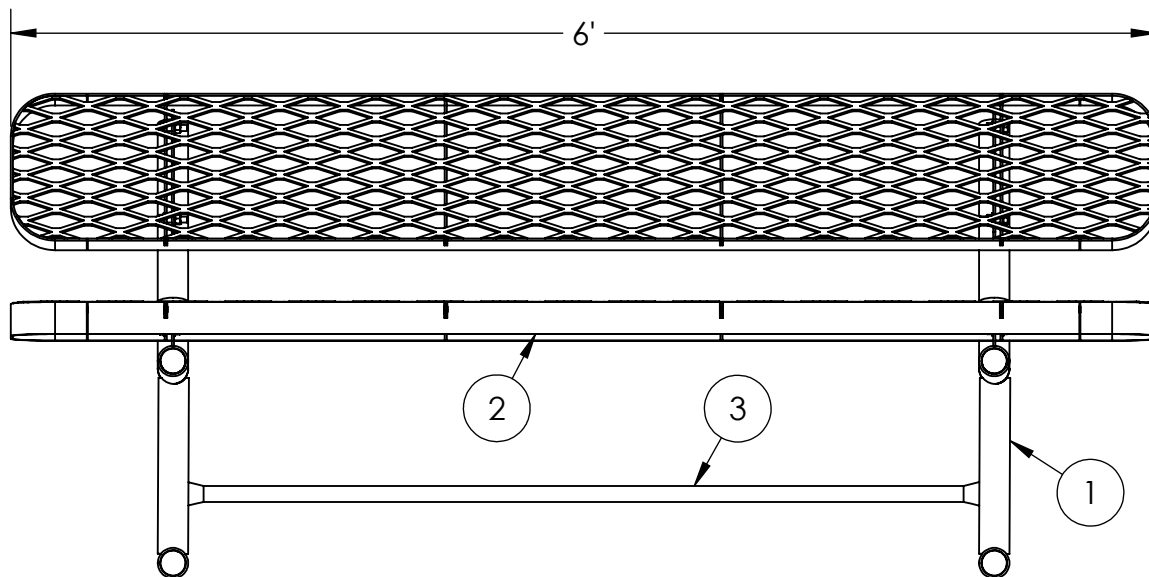

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	630-010	Bench With Back stand FS	2
2	622-013	6' Champion Seat/Back (QS)	2
3	630-013	6' Free Standing Bench Brace	1
4	516-058	3/8"x1-1/2" SS Hex Bolt	8
5	516-023	3/8" SS Flat Washer	18
6	516-028	3/8" SS Nylock Nut	10




PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.



SIZE
A

REV. X.01 SHEET 1 OF 2

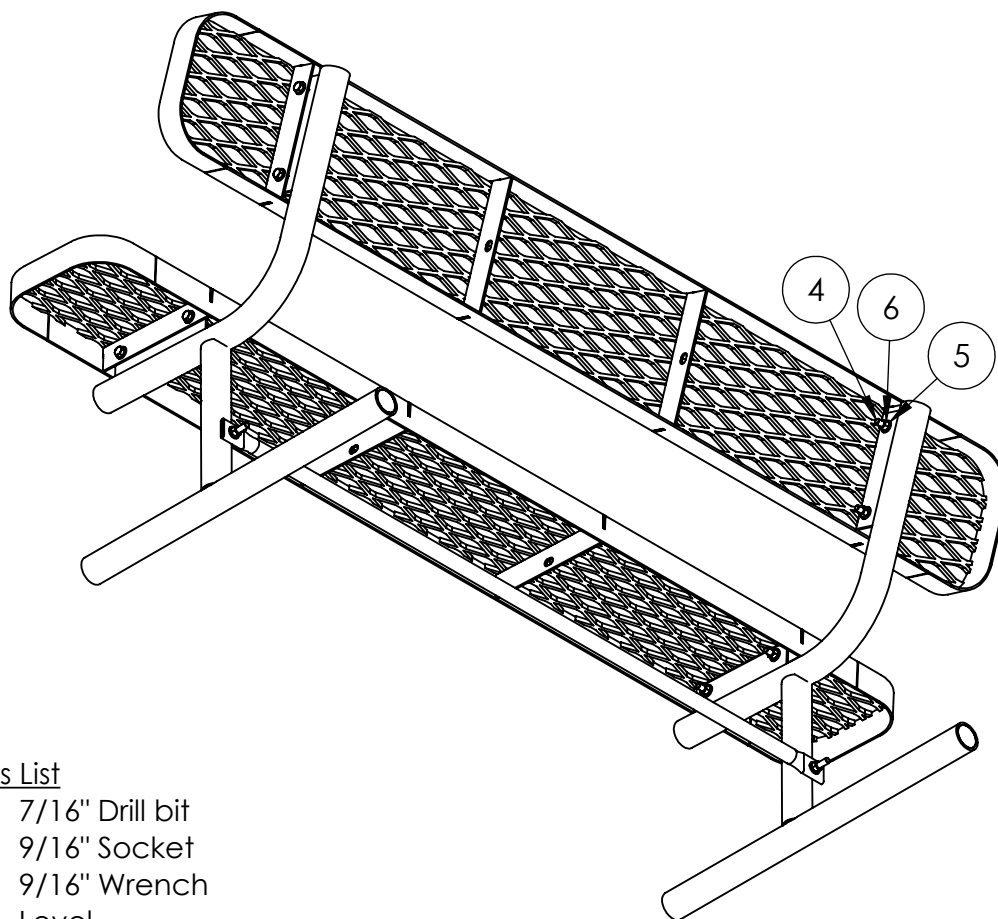

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Impact Gun (Optional)
- Drill

This product uses Hardware Pack HWPK03
(you may receive extra hardware)

8 qty. 3/8" x 1-1/2" SS Hex Bolt

10 qty. 3/8" SS Nylock Nut

18 qty. 3/8" SS Flat Washer

1. Drill plastic out of the mounting holes on the seat, stands and braces using a 7/16" diameter drill bit.
2. Bolt the seat/back to the stands and brace loosely using fixings provided.
3. Set on level surface and tighten up.

Periodic check of bolts tightness recommended



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

