




8' Champion Perforated Bench with Back Free Standing

947-501

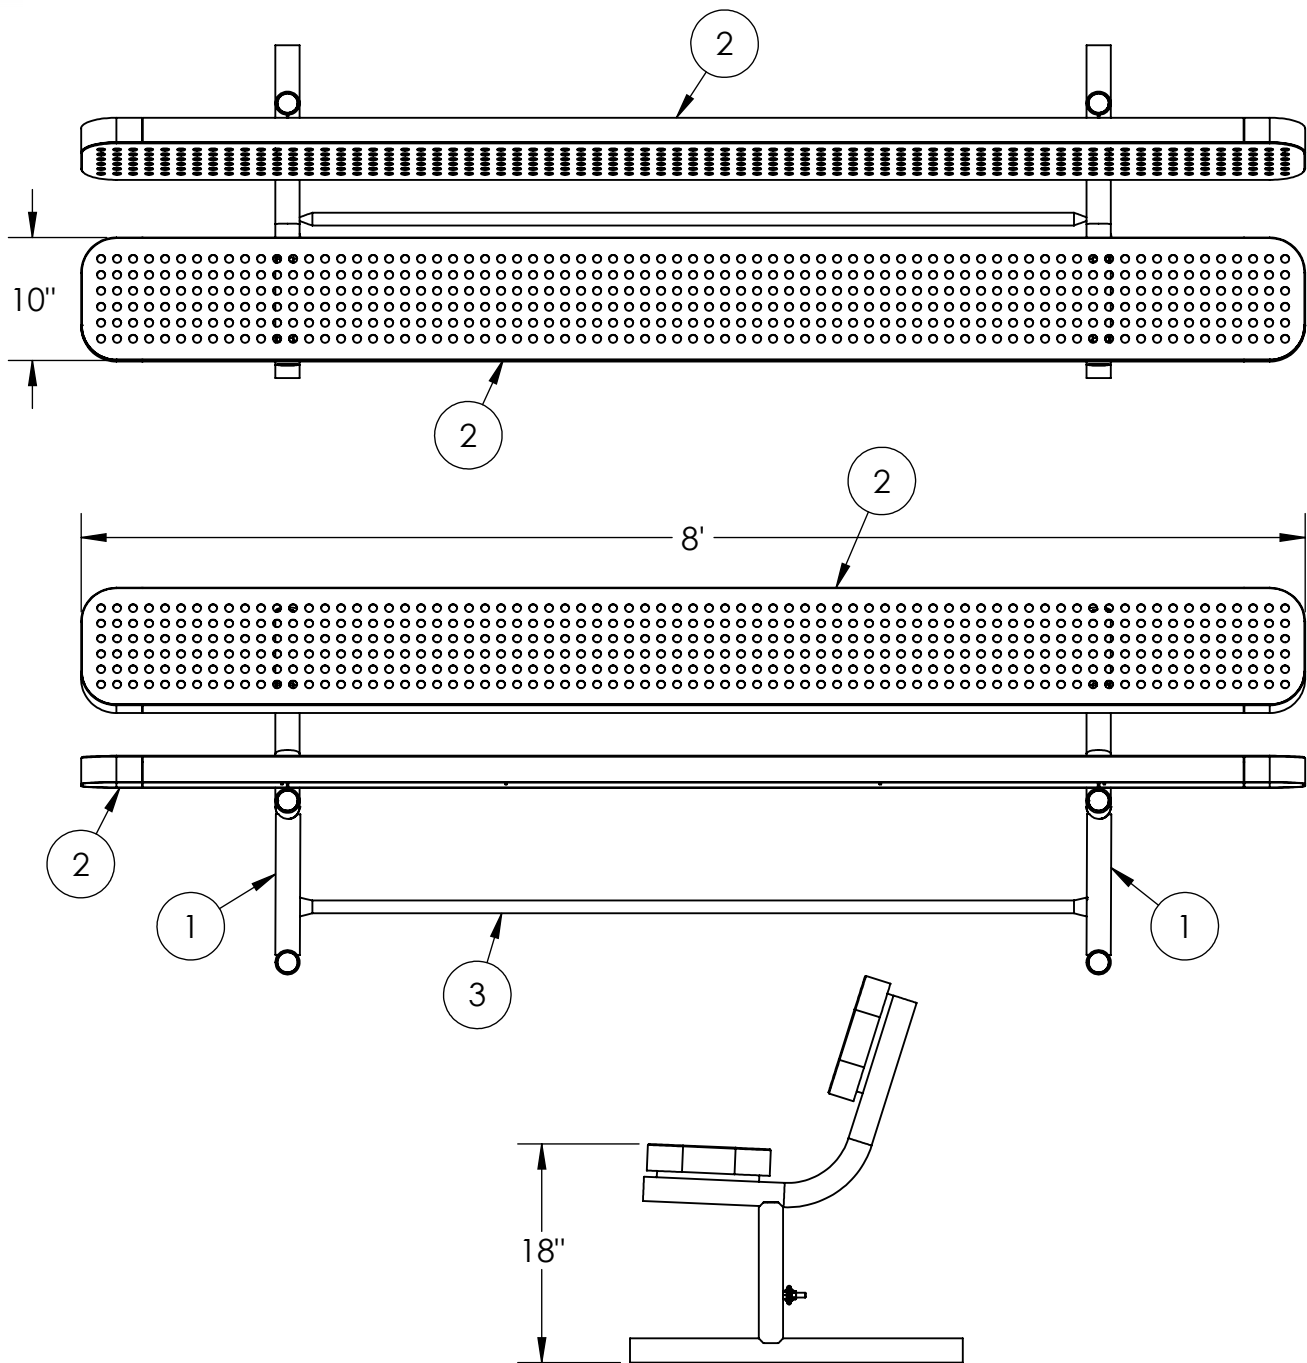

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	630-010	Bench With Back stand FS	2
2	622-0P5	8' Perforated Champion Seat/Back	2
3	630-017	8' Bench Brace	1
4	516-058	3/8"x1-1/2" SS Hex Bolt	8
5	516-023	3/8" SS Flat Washer	20
6	516-028	3/8" SS Nylock Nut	10



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.




SIZE
A

REV. X.01 | SHEET 1 OF 2



Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Drill

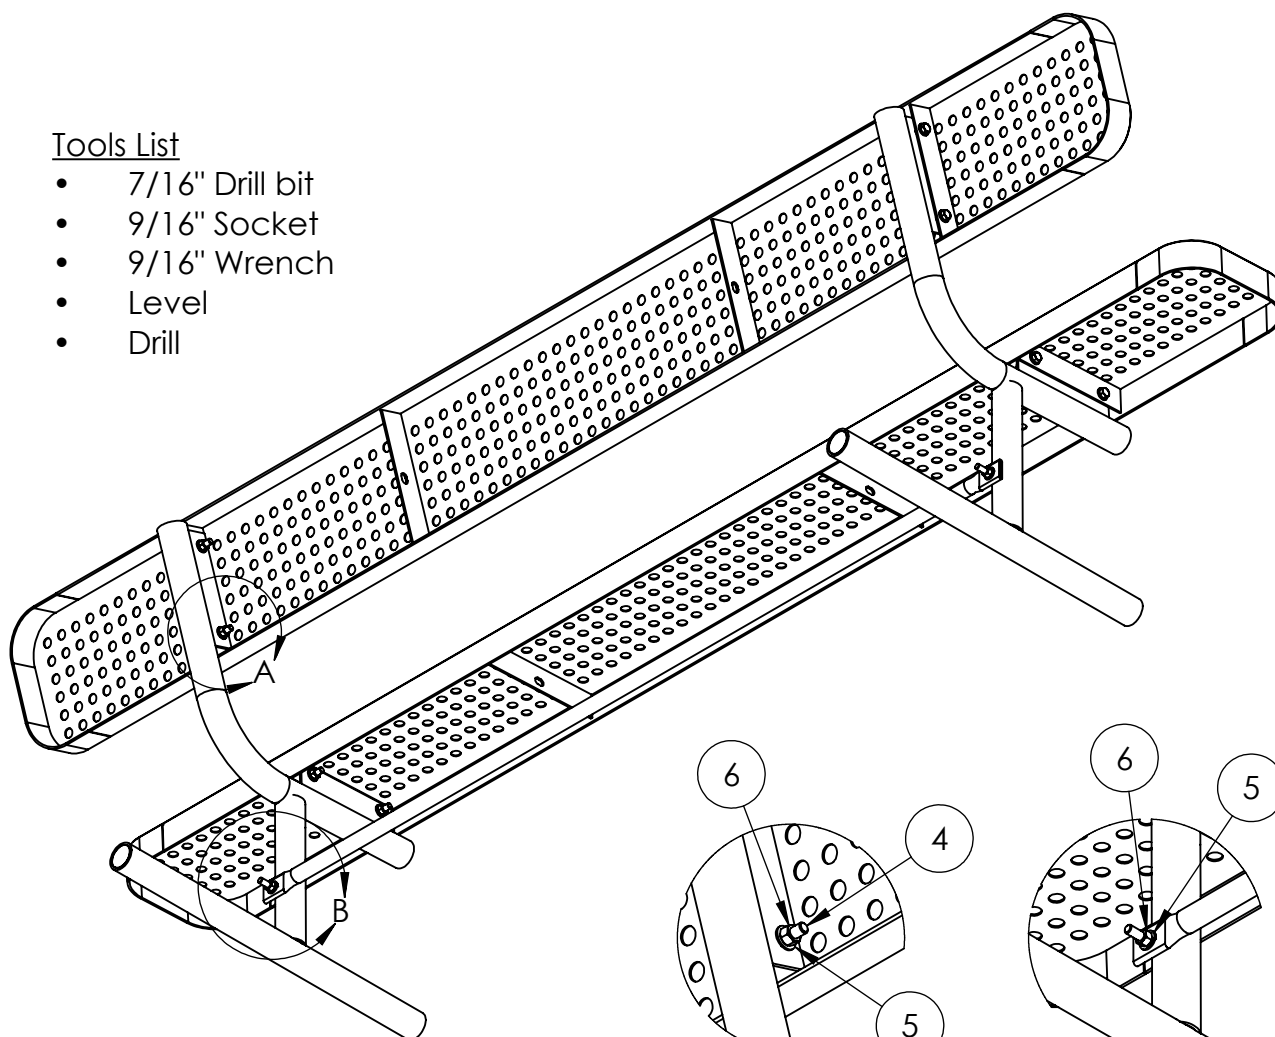

DETAIL A

DETAIL B

1. Drill the plastic out of all mounting holes in the seat, back and stands using a 7/16" drill bit.
2. Bolt the seat and back to the stands using fixings provided. Do not tighten up.
3. Bolt the brace to the stands loosely.
4. Set the bench on a level surface and tighten up all fixings.

Periodic check of bolts tightness recommended

In accordance to California law: WARNING - This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

