


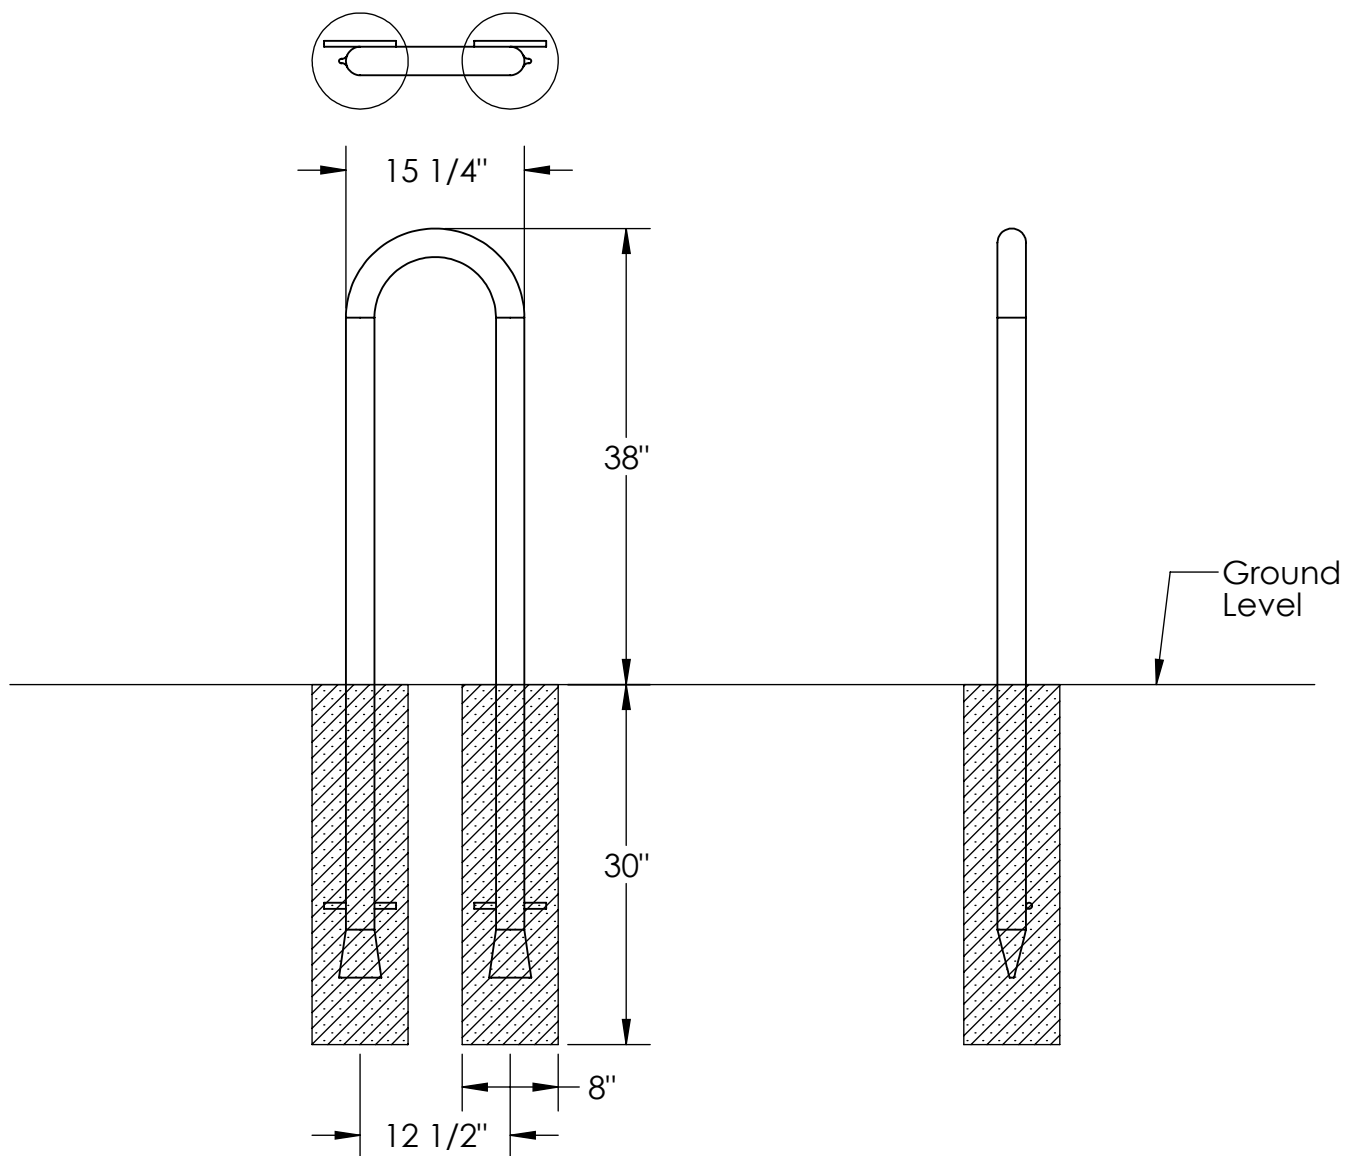

1. Bore 8" Dia. holes into the ground in the desired location as shown. The holes should be at least 30" deep or below the frost line in your area, which ever is deeper.
2. Place bike rack into the holes and secure it at the proper height, making sure that it is plumb.
3. Fill holes with concrete level with the surrounding surface.
4. Let the bike rack stand for 24 hours before removing the supports.



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

