


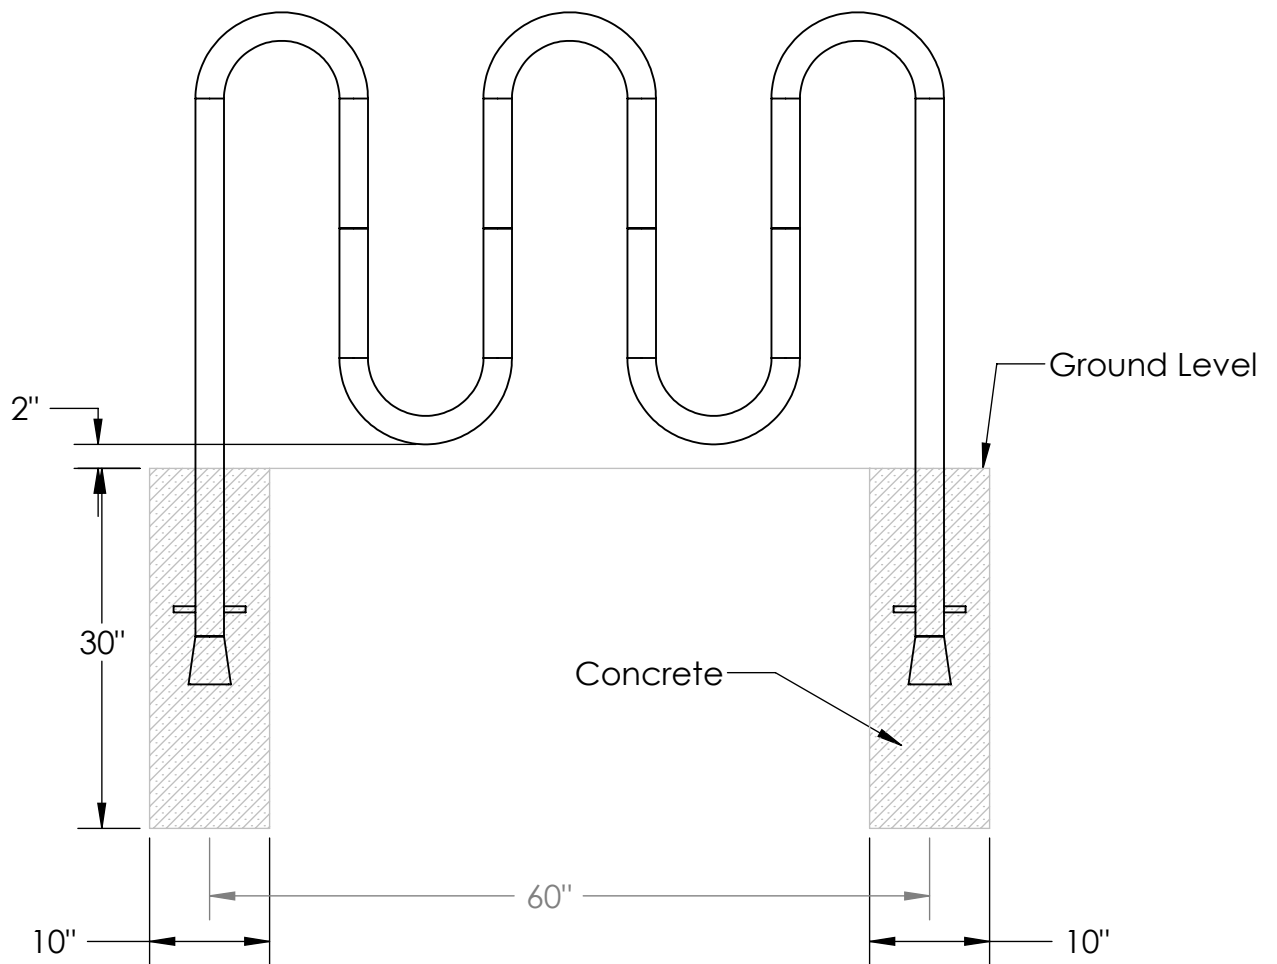

1. Use the bike rack to locate ground hole location. *(The 60" dimension may vary.)*
2. Drill holes in ground as shown.
3. Support the bike rack in the holes and fill the holes with concrete.
4. Remove the supports after the concrete has set.

In Accordance to California law: WARNING This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

DIMENSIONS ARE IN INCHES

Premier Loop Style Bike Rack 3 Loop, 5' Direct Bury

			SIZE	DWG. NO.	REV.
			A	997-206	A
DRAWN	NAME	DATE	SCALE:1:16	WEIGHT: 84.84	SHEET 1 OF 1
	Kevin	4/12/2010			