



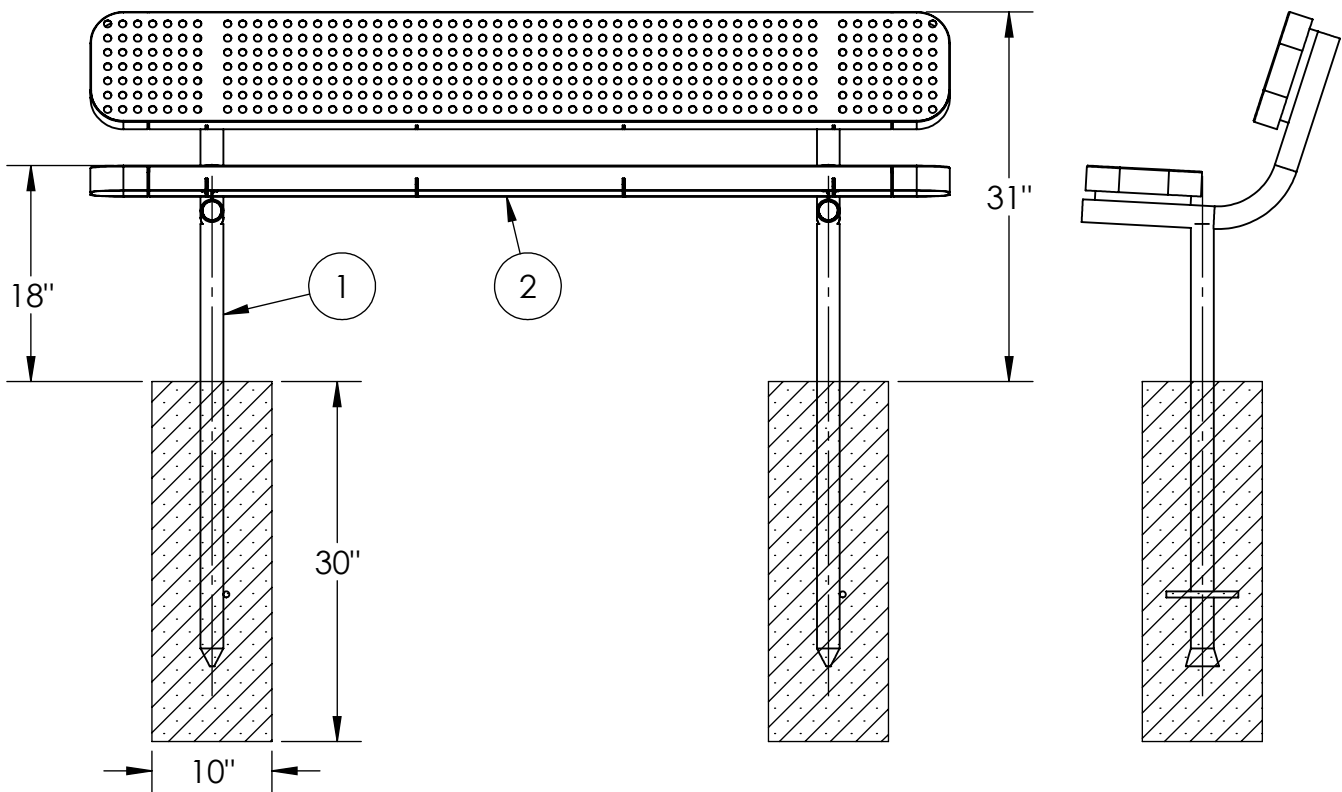

6' Champion Perforated Metal Direct Bury Bench with Back

947-3P2

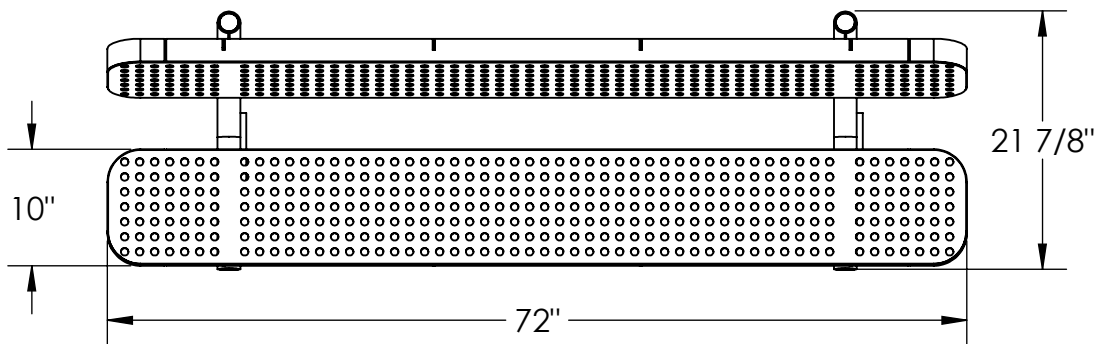

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	630-020	Bench With Back Stand DB	2
2	622-0P3	6' Champion Perforated Seat/Back	2
3	516-058	3/8"x1-1/2" SS Hex Bolt	8
4	516-023	3/8" SS Flat Washer	16
5	516-028	3/8" SS Nylock Nut	8



PREMIER POLYSTEEL



The Best Commercial Outdoor Furniture Available. Period.






6' Champion Perforated Metal Direct Bury Bench with Back

947-3P2

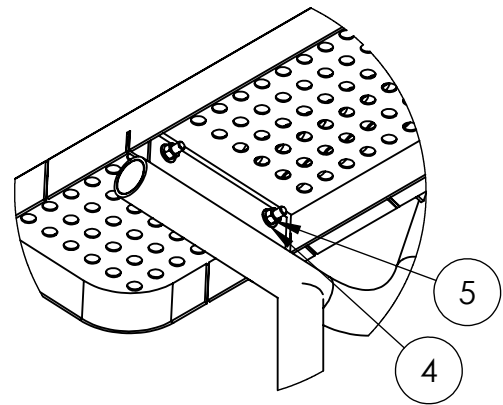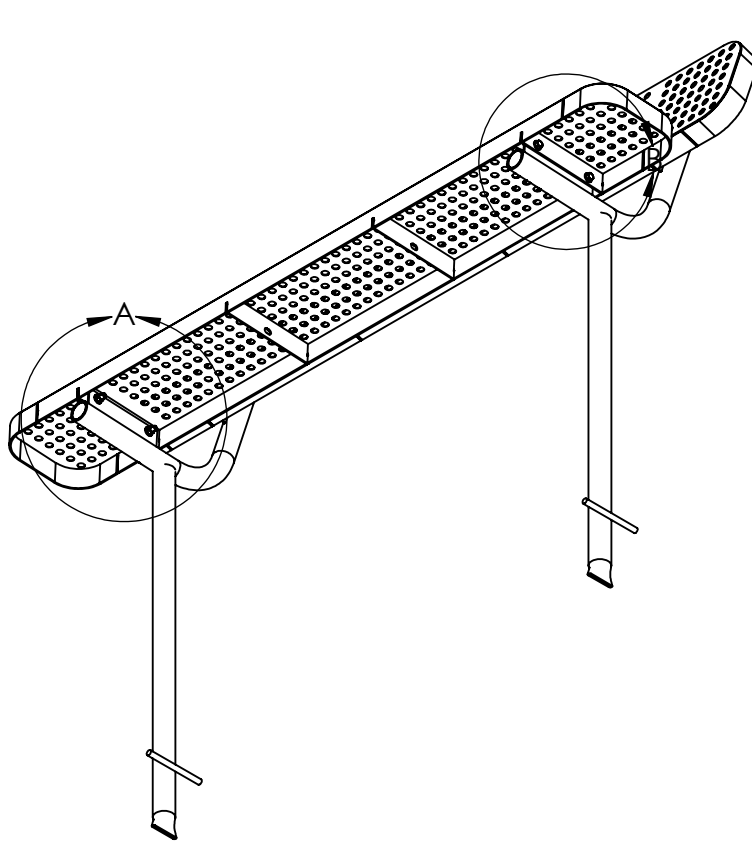

DETAIL A
SCALE 1 : 8

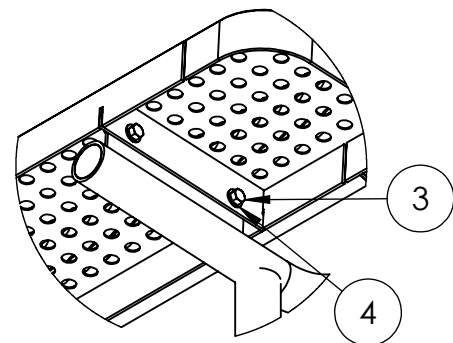

DETAIL B
SCALE 1 : 8

- Tools List
- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Impact Gun (Optional)
- Drill

This product uses Hardware Pack HWPK04
(you may receive extra hardware)

8 qty. 3/8" x 1-1/2" SS Hex Bolt

8 qty. 3/8" SS Nylock Nut

16 qty. 3/8" SS Flat Washer

1. Drill plastic out of the mounting holes on the legs, seat and back using a 7/16" diameter drill bit.
2. Bolt the seat and back to the legs and tighten up.
3. Mark out the holes for the legs on the ground in the desired location. Drill 10" diameter holes at each location to a minimum depth of 30" or below the frost line in your area, whichever is greater
4. Place the seat into the holes and support at the desired height. Level the seat.
5. Fill the holes with concrete and crown the top so that water will run off. Let stand for 24 hours before removing the supports

Periodic check of bolts tightness recommended



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.



SIZE

A

Sheet 2 OF 2