

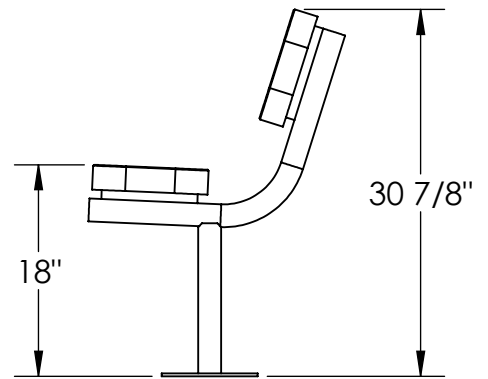


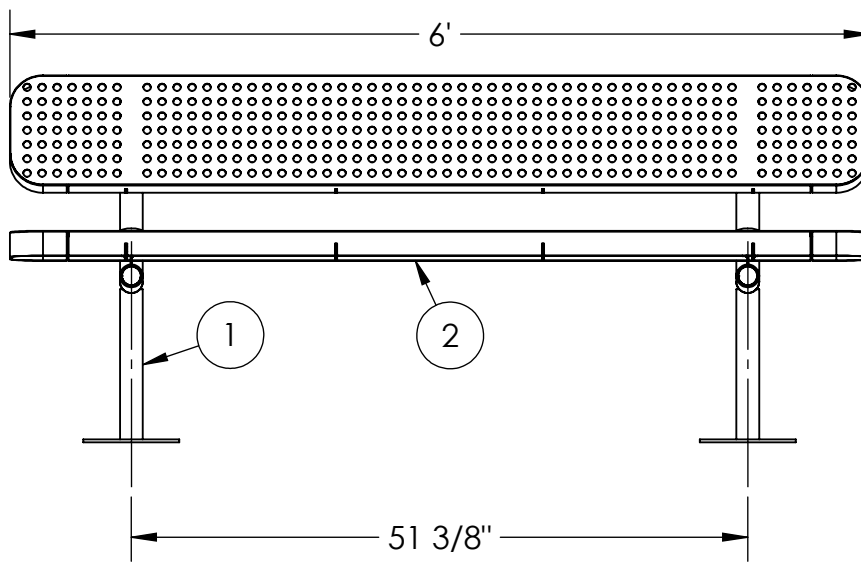

6' Champion Perforated Metal Surface Mount Bench with Back

947-3P7

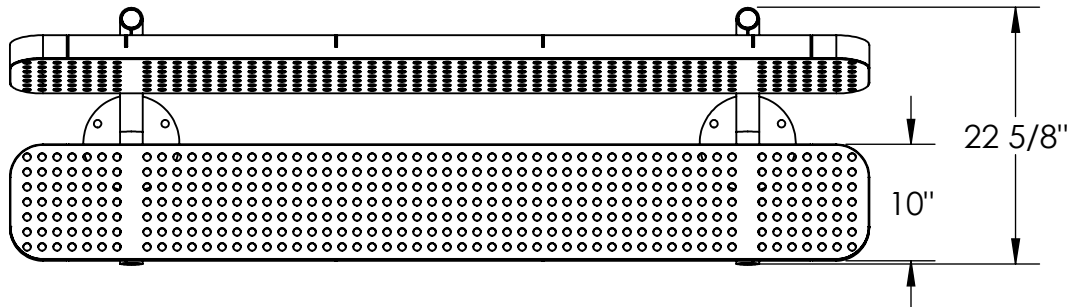



ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	633-012	Bench Stand With Back SM	2
2	622-0P3	6' Champion Perforated Seat/Back	2
3	516-058	3/8"x1-1/2" SS Hex Bolt	8
4	516-028	3/8" SS Nylock Nut	8
5	516-023	3/8" SS Flat Washer	16




PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.



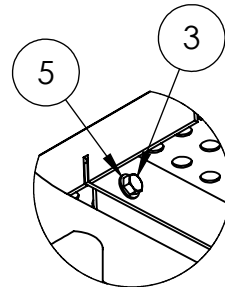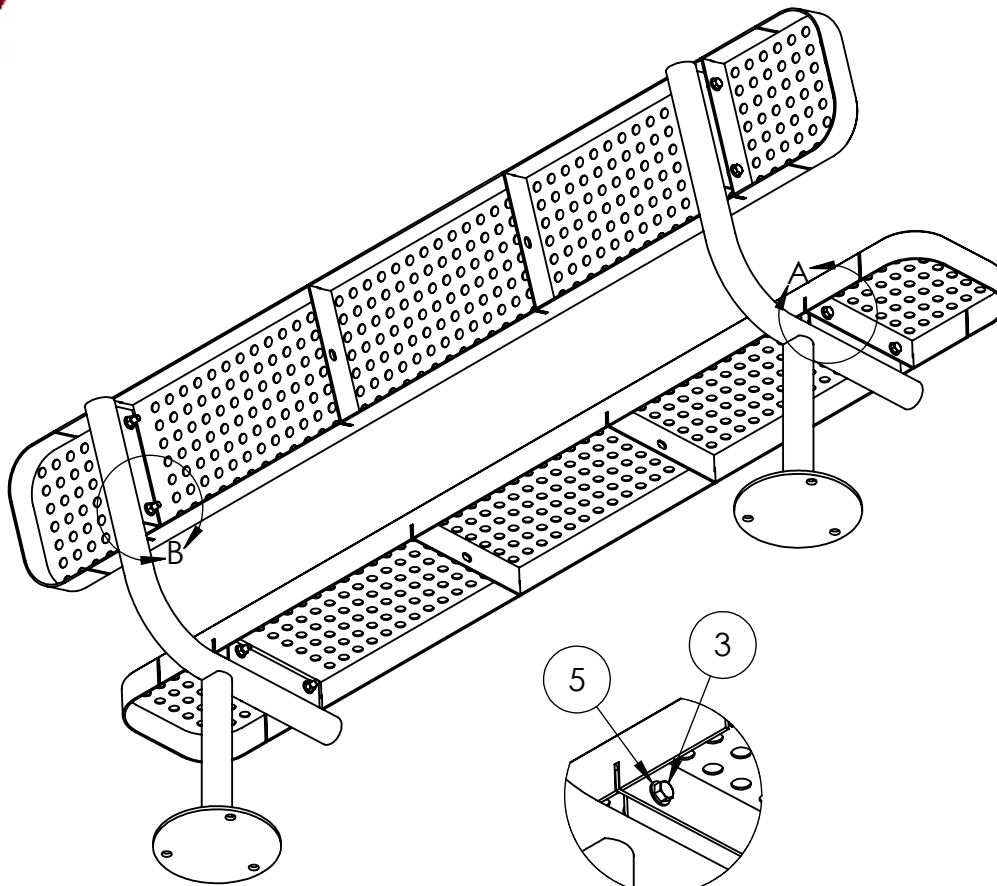

DETAIL A
SCALE 1 : 6

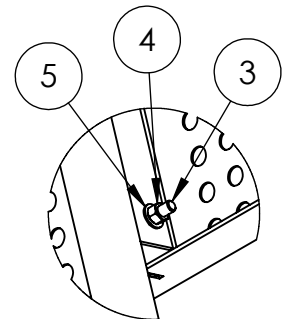

DETAIL B
SCALE 1 : 6

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Impact Gun (Optional)
- Drill

This product uses Hardware Pack HWPK04 (you may receive extra hardware)
8 qty. 3/8" x 1-1/2" SS Hex Bolt
8 qty. 3/8" SS Nylock Nut
16 qty. 3/8" SS Flat Washer

1. Drill plastic out the mounting holes on the stands, seat and back using 7/16" diameter drill bit.
2. Attach the stands to the seat using fixings provided.
3. Stand the bench in its final location and mark out base holes.
4. Move the bench to a safe place and drill holes.
5. Place the bench back, level and secure down using appropriate fixings for the ground material.

Periodic check of bolts tightness recommended



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

