

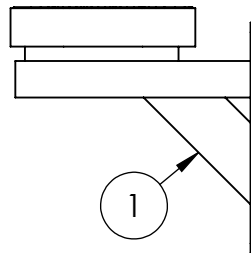


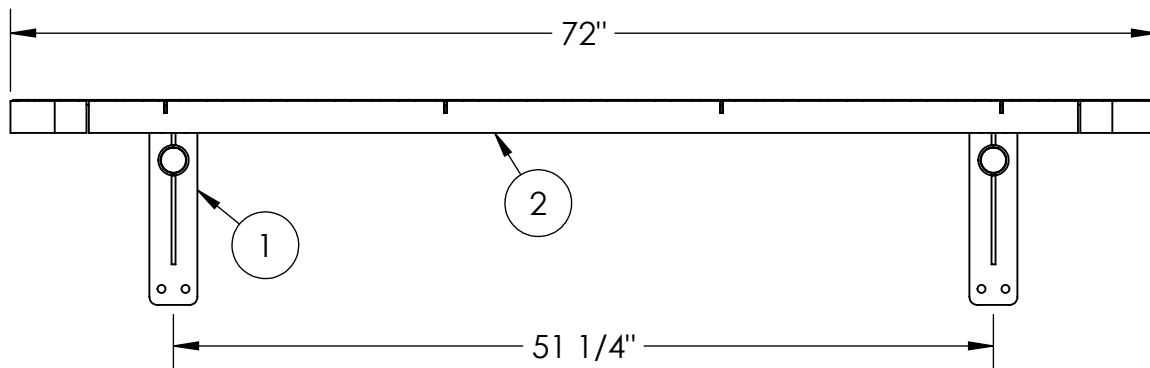

CHAMPION 6' WITHOUT BACK, WALL MOUNTED

935-304

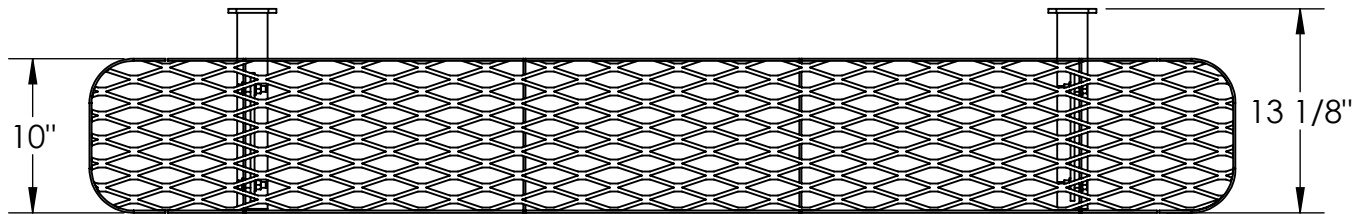

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	634-001	Wall Mount Bench Without Back	2
2	622-013	6' Champion Seat/Back (QS)	1
3	516-058	3/8"x1-1/2" SS Hex Bolt	4
4	516-023	3/8" SS Flat Washer	8
5	516-028	3/8" SS Nylock Nut	4




PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.



SIZE
A

Sheet 1 OF 2

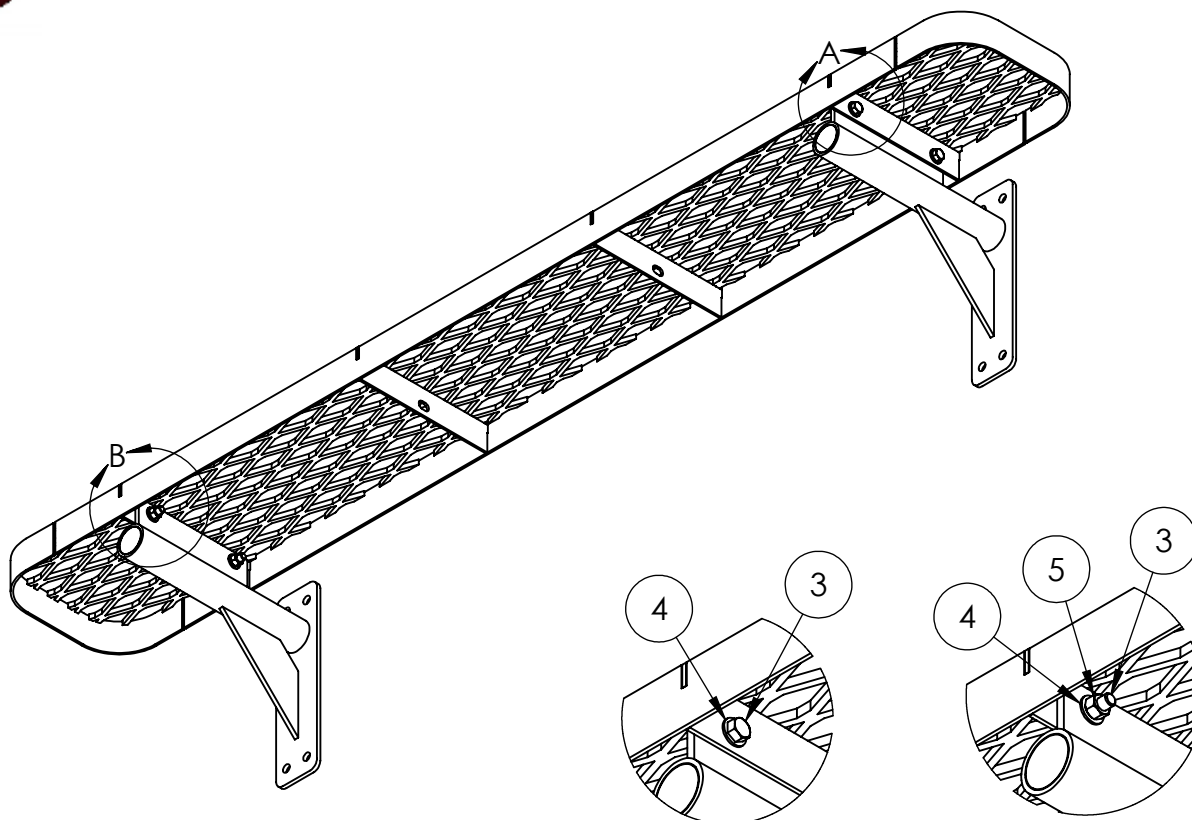

DETAIL A
SCALE 1 : 5

DETAIL B
SCALE 1 : 5

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Impact Gun (Optional)
- Drill

This product uses Hardware Pack HWPK05
(you may receive extra hardware)

8 qty. 3/8" x 1-1/2" SS Hex Bolt
8 qty. 3/8" SS Nylock Nut
16 qty. 3/8" SS Flat Washer

1. Drill plastic out of the mounting holes on the brackets and seat using a 7/16" diameter drill bit.
2. Fix the brackets to the seat using the bolts provided and tighten up.
3. Hold the seat up against the wall in it's final location and mark out fixing holes.
4. Place the seat in a safe location and drill holes using appropriate drill bit.
5. Lift up seat and fix in place using the correct fixings for the wall material.

Periodic check of bolts tightness recommended



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

