



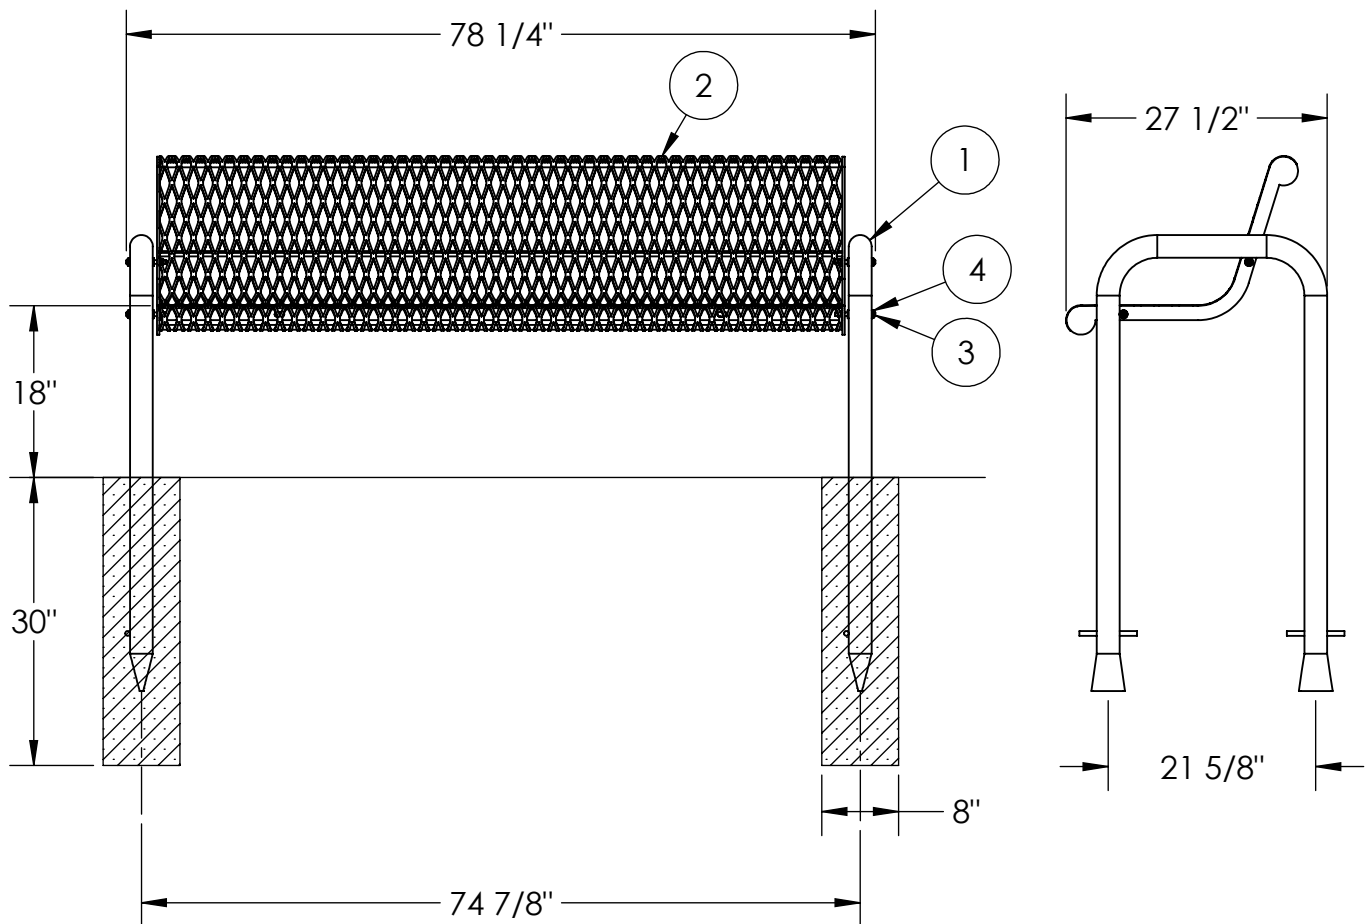

6' Expanded Grand Contour With Back Direct Bury

974-302

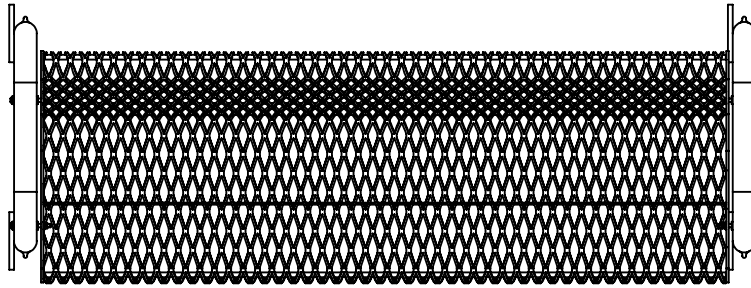

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	733-212	Grand Contour Tube Frame DB	2
2	623-015	6' GC Expanded Bench with Back	1
3	516-033	3/8"x4" SS Button Head Cap Screw	4
4	516-023	3/8" SS Flat Washer	8
5	516-028	3/8" SS Nylock Nut	4




PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.



SIZE
A

REV. X.01 | SHEET 1 OF 2

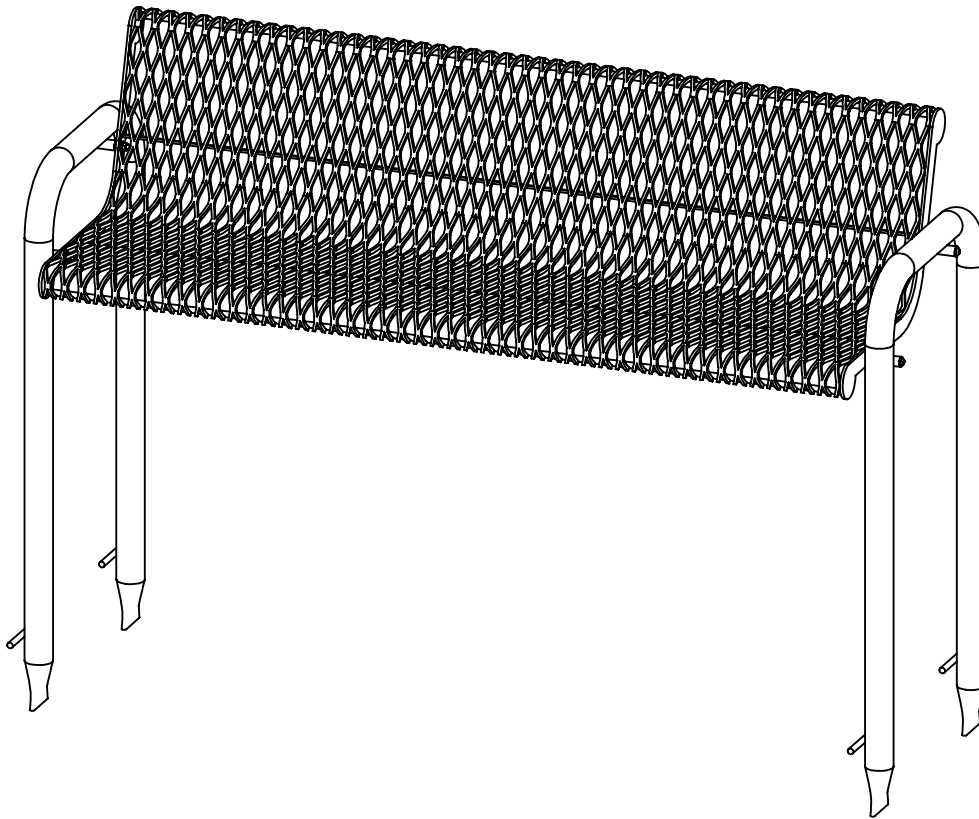

1. Drill plastic out of the mounting holes on the seat using a 7/16" diameter drill bit.
2. Bolt the seat to the legs and tighten up.
3. Mark out the holes for the legs on the ground in the desired location. Drill 8" diameter holes at each location to a minimum depth of 30". You need to be below the frost line in your area.
4. Place the seat into the holes and support at the desired height. Level the top of the stands side to side and front to back.
5. Fill the holes with concrete and crown the top so that water will run off. Let stand for 24 hours before removing the supports.

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- 7/32" Hex Key/Allen Wrench
- Level
- Impact Gun (Optional)
- Drill

This product uses Hardware Pack HWPK09
(you may receive extra hardware)

- 4 qty. 3/8" x 4" SS BSCS
- 4 qty. 3/8" SS Nylock Nut
- 8 qty. 3/8" SS Flat Washer

In Accordance with California law: WARNING This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

