




939-302

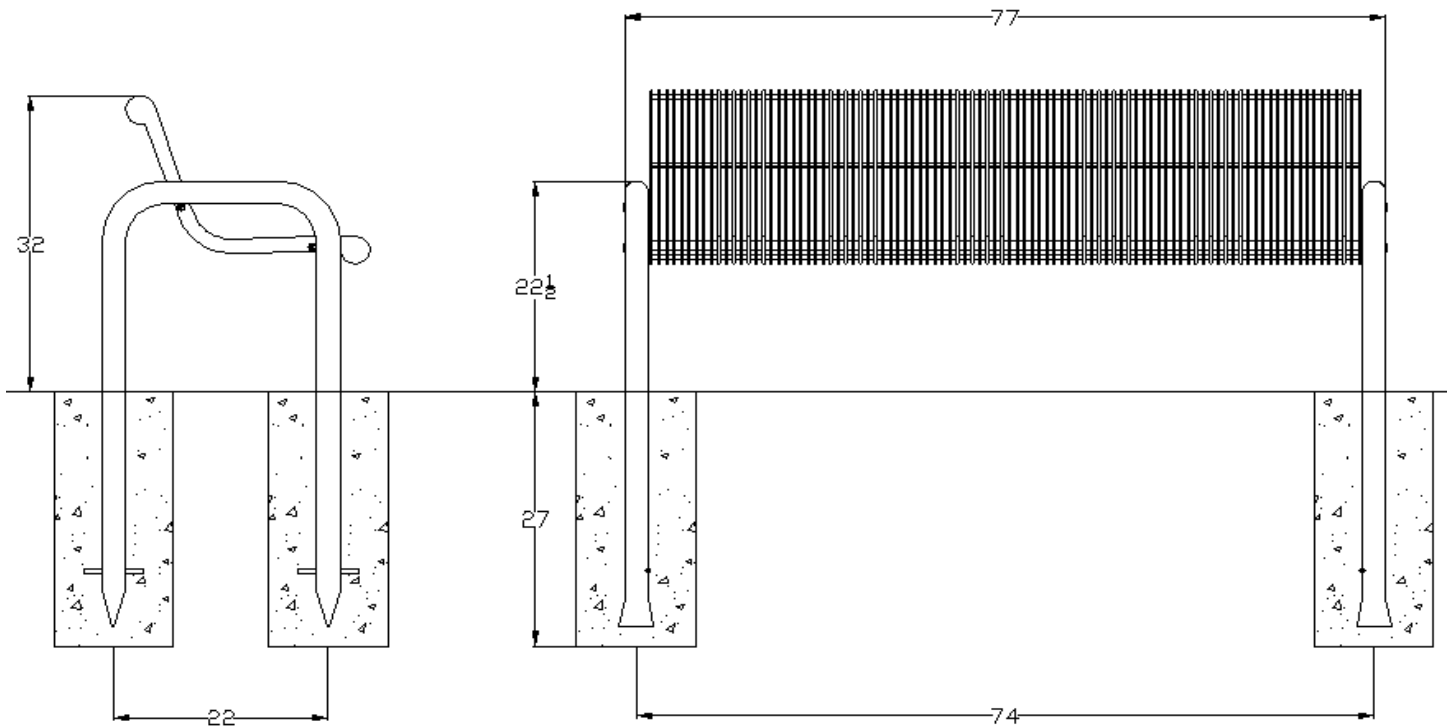

Part No.	Description	Qty.
625-005	6' Grand Contour Seat	1
733-212	Grand Contour Stand Direct Bury	2
516-033	3/8"x4" SS Button Socket Cap	4
516-028	3/8" SS Nylock Nut	4
516-023	3/8" SS Washer	4

- 1 Drill plastic out of the mounting holes on the seat using a 7/16" dia. drill bit.
- 2 Fasten the seat to the stands using the 4" Button Socket Cap Screws.
- 3 Tighten all of the bolts.
- 4 Dig 27" post holes in the appropriate spots and put bench in place
- 5 Once straight and level, secure in place with concrete.

Periodic check of bolt tightness recommended.



PREMIER POLYSTEEL
The Best Commercial Outdoor Furniture Available. Period.

