




4' GC Without Back Expanded Bench Direct Bury

973-102

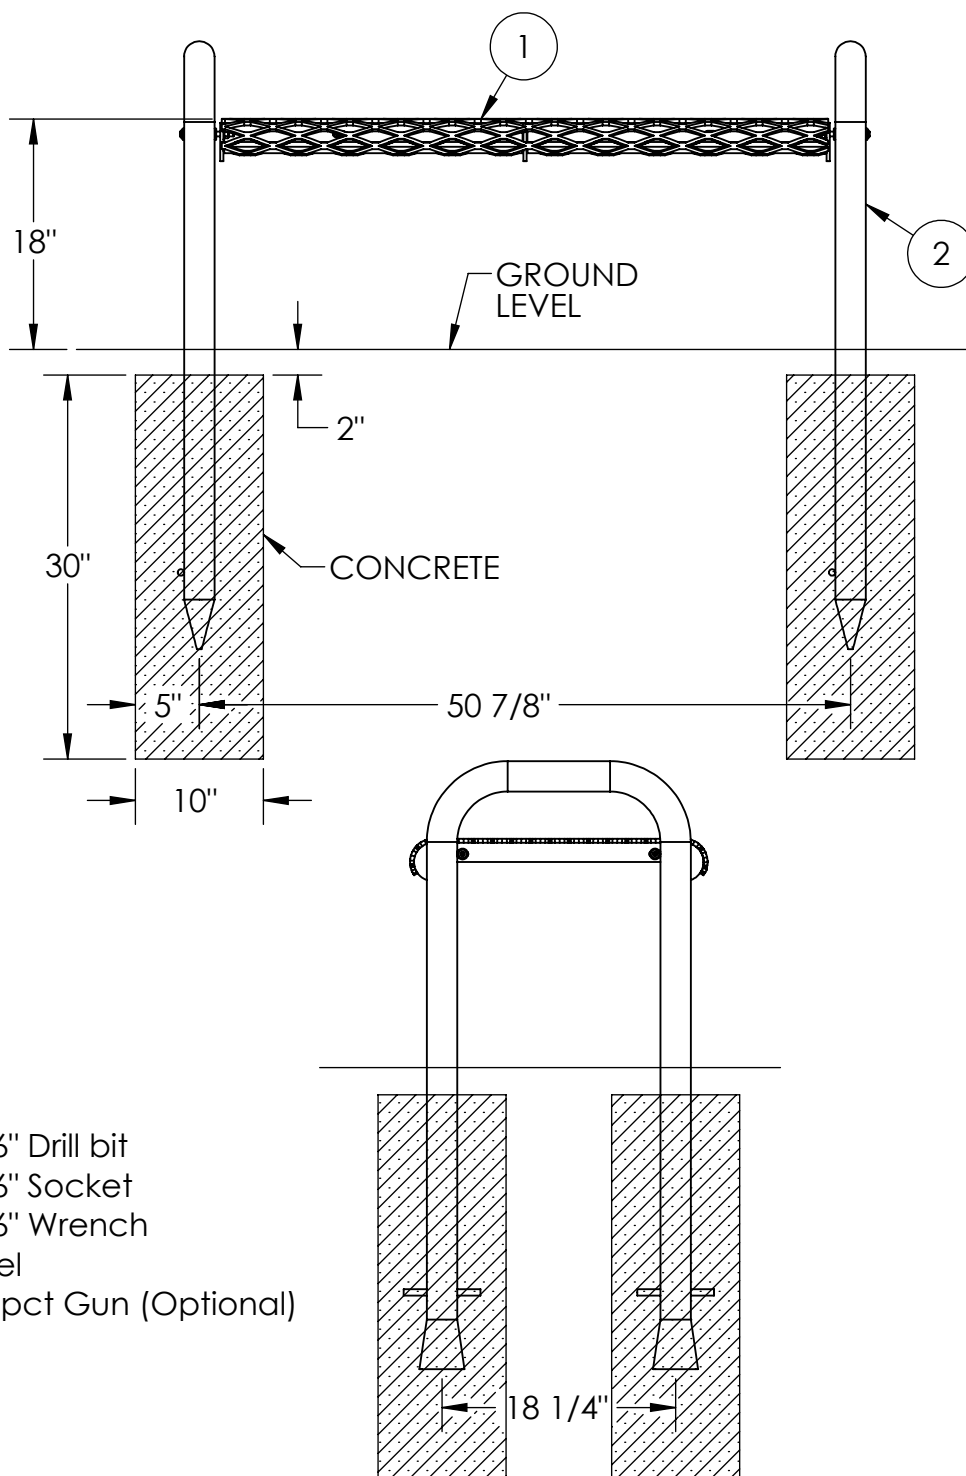

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Impact Gun (Optional)
- Drill

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	652-211	4' GC Expanded Bench Without Back	1
2	733-211	Flat Grand Contour Tube Frame DB	2
3	516-033	3/8"x4" SS Button Head Cap Screw	4
4	516-023	3/8" SS Flat Washer	4
5	516-028	3/8" SS Nylock Nut	4




PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.



SIZE
A

REV. X.01 | SHEET 1 OF 2

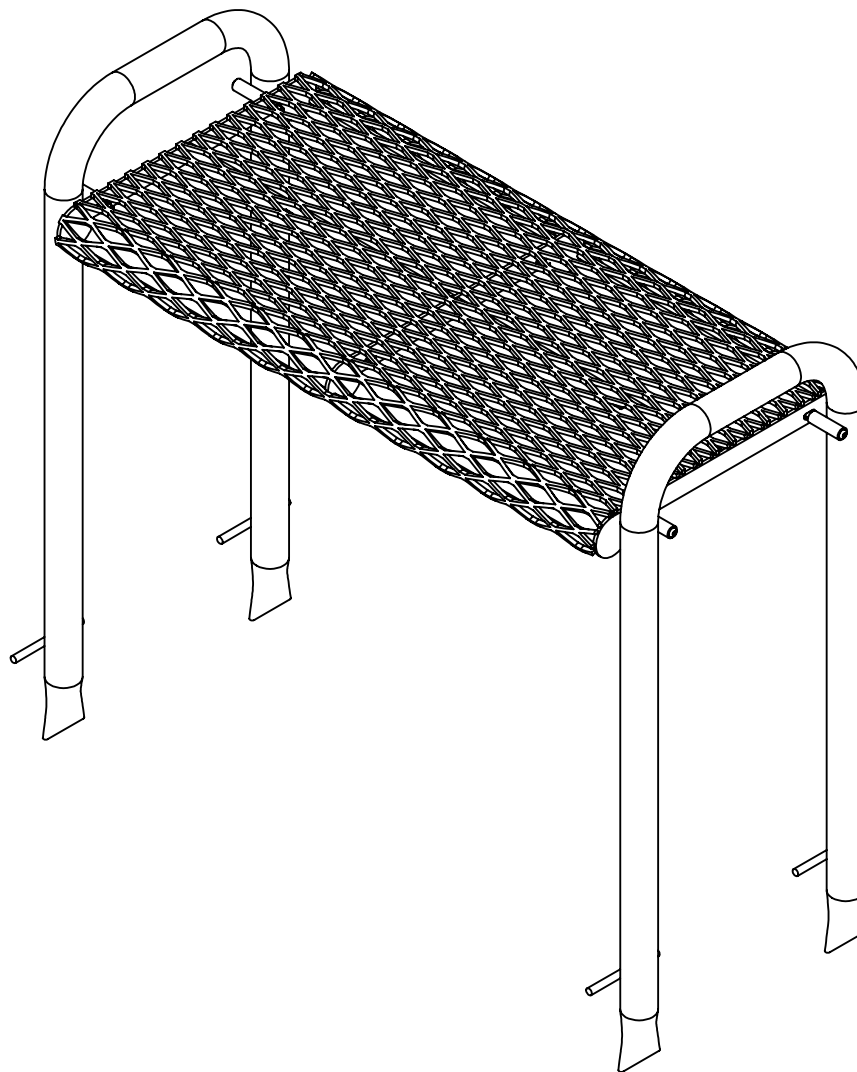

1. Mark out 4 number holes in your desired location.
2. Bore 10" diameter holes into the ground. The holes should be at least 32" deep or below the frost line in your area, which ever is greater.
3. Place 4-6" of pea rock in the holes.
4. Drill out the plastic of all holes using a 7/16" drill bit.
5. Bolt the seat to the legs and tighten up.
6. Place the bench into the holes and support at the desired height. The recommended height is 18" to the top of the seat. Level the seat.
7. Fill the holes with concrete and crown the top so water will run off.
8. Let the bench stand for 24 hours before removing the supports.

Periodic check of bolts tightness recommended

In accordance to California law: WARNING - This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

