




# 45 Degree Contour Laser Direct Bury With Back

982-45D-2(X)

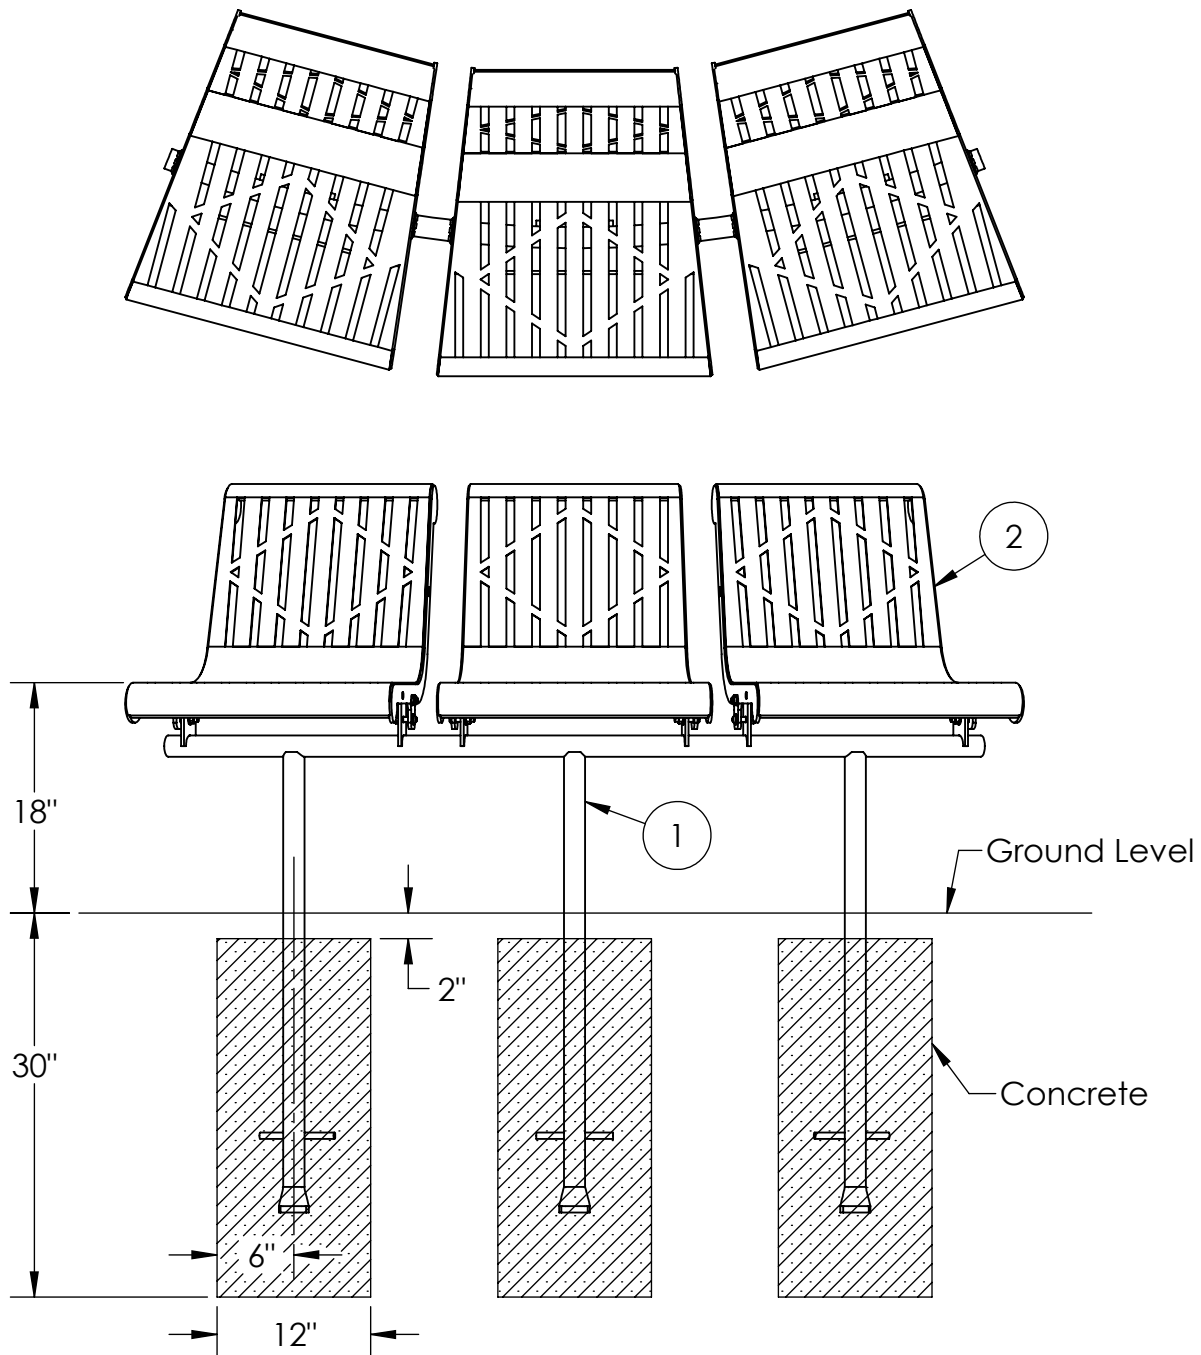

| ITEM NO. | PART NUMBER | DESCRIPTION                             | QTY. |
|----------|-------------|-----------------------------------------|------|
| 1        | 652-026     | 45 Degree Arc Support Frame Direct Bury | 1    |
| 2        | 652-047     | 45 Degree GC with back Laser Seat       | 3    |
| 3        | 516-031     | 3/8"x1-3/4" SS Btn Skt Cap Screw        | 18   |
| 4        | 516-023     | 3/8" SS Flat Washer                     | 36   |
| 5        | 516-028     | 3/8" SS Nylock Nut                      | 18   |





## PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.



SIZE  
A

REV. X.01 | SHEET 1 OF 2

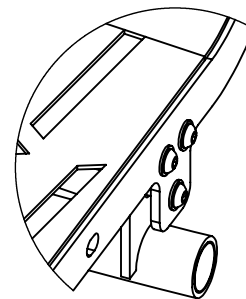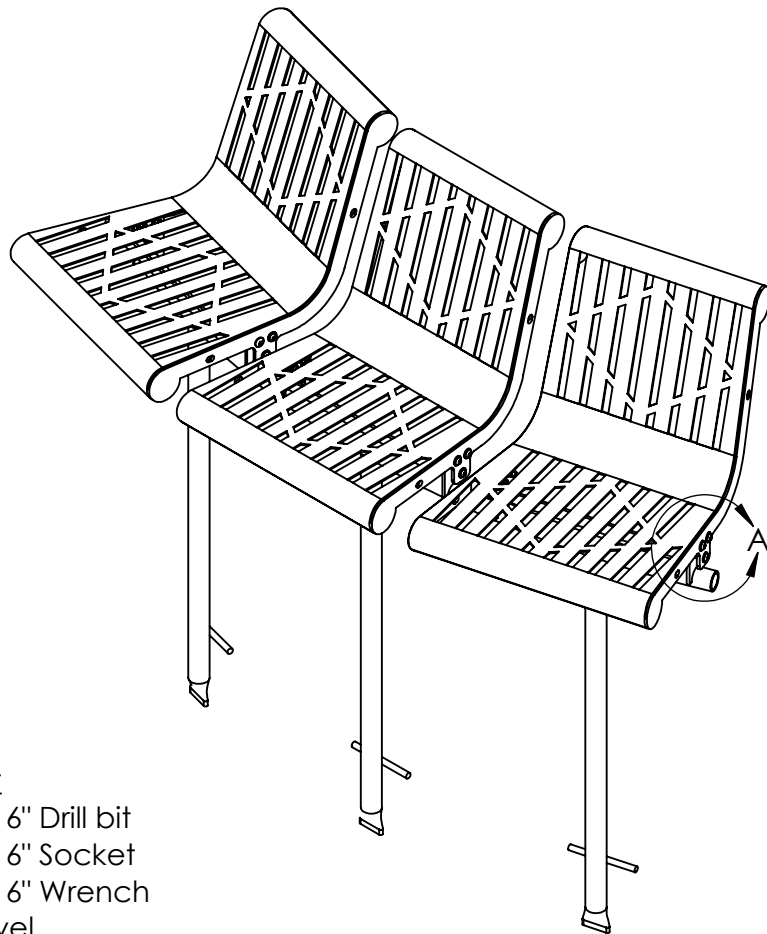

DETAIL A

### Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Impact Gun (Optional)
- Drill

1. Drill plastic out of the mounting holes on the stand and seats using a 7/16" diameter drill bit.
2. Mark out the holes for the legs on the ground in the desired location.
3. Drill 12" diameter holes at each location to a minimum depth of 30". You need to be below the frost line in your area.
4. Bolt the seats to the stand and tighten up.
5. Place the seat into the holes and support at the desired height. Level the seat.
6. Fill the holes with concrete and crown the top so that water will run off.
7. Let stand for 24 hours before removing the supports.

*Periodic check of bolts tightness recommended*

In accordance to California law: WARNING - This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.



## PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

