


977-307

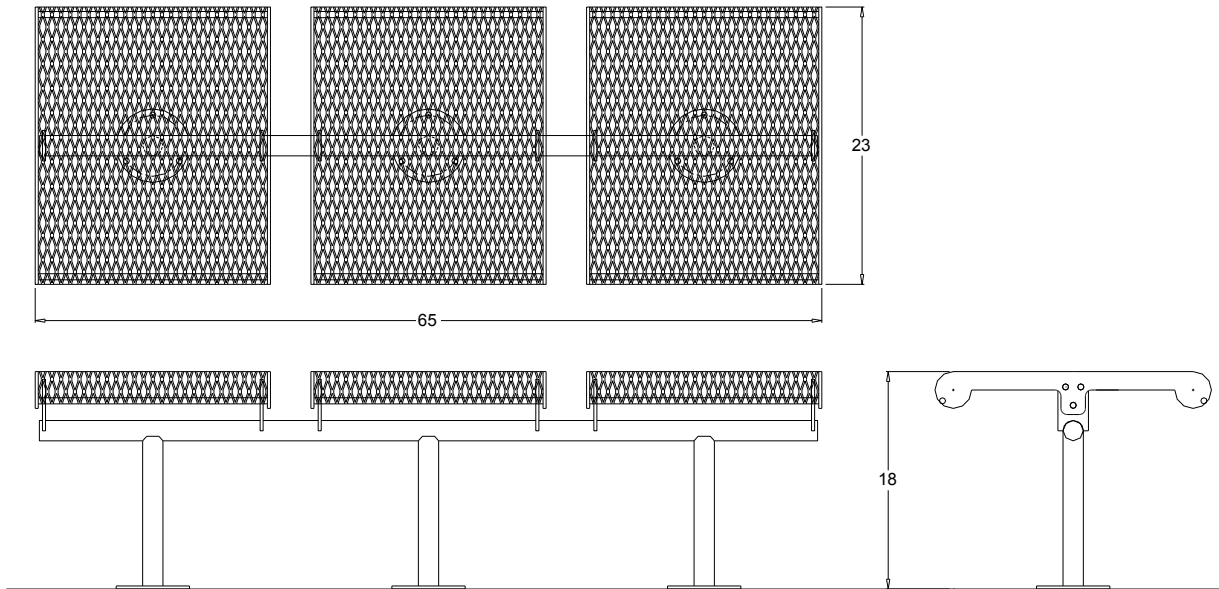

Part No.	Description	Qty.
652-111	Contour Single Flat Seat	3
652-136	3 Seat Inline Support Frame Surface Mount	1
516-045	3/8" X 1-1/4" SS Btn Skt Cap Scr.	18
516-028	3/8" SS Nylock Nut	18
516-023	3/8" SS Washer	36

- 1 Position the support frame in the desired location and anchor it to the concrete.
- 2 Drill plastic out of the mounting holes on the seats and stand using a 7/16" dia. drill bit.
- 3 Fasten the seats to the stand loosely.
- 4 Make sure that the three seats are level with each other and tighten all of the bolts.

In Accordance to California law: WARNING This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

Periodic check of bolt tightness recommended.