


Grand Contour Series 3 Seat In Line Bench without Back

977-302

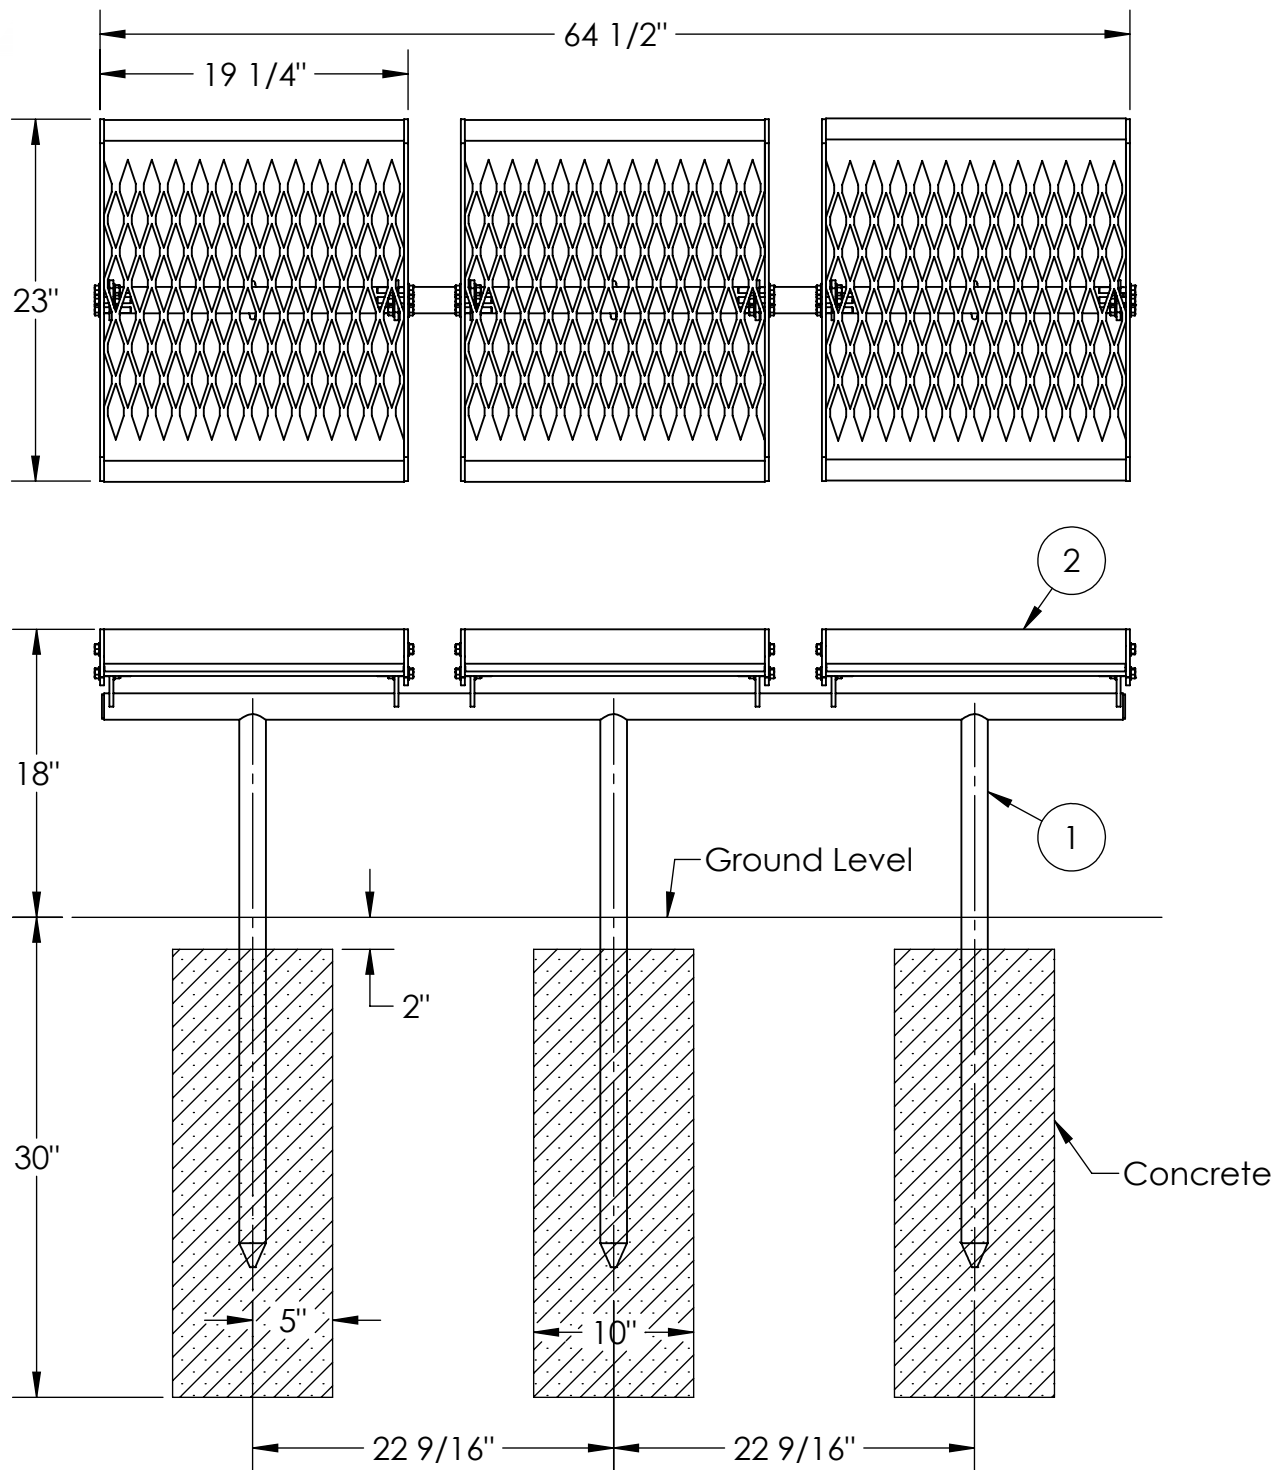

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	652-137	3 In Line Seat Direct Bury Stand	1
2	652-111	Single Expanded Contour Flat Seat	3
3	516-054	3/8"x2" SS Hex Head Bolt	18
4	516-023	3/8" SS Flat Washer	36
5	517-028	3/8" Zinc Nylock Nut	18

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Impact Gun (Optional)
- Drill

1. Bore 3no. 10" diameter holes into the ground as per drawings.
2. The holes should be at least 30" deep as shown or below the frost line in your area, which ever is greater.
3. Place 4-6" of pea rock in hole.
4. Drill out all holes on the seats and support stand with a 7/16" drill bit.
5. Place the support stand into the holes and support it.
6. Bolt the seats on to the support stand using fixings provided.
7. Level the seats and adjust to desired height. Recommended height is 18" from the ground to the top of the seats.
8. Fill the holes with concrete to approximately 2" below ground level or fill to no higher than ground level and crown the top so that water will run off.
9. Let stand for 24 hours before removing the supports.

Periodic check of bolts tightness recommended

In Accordance to California law: WARNING This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.