
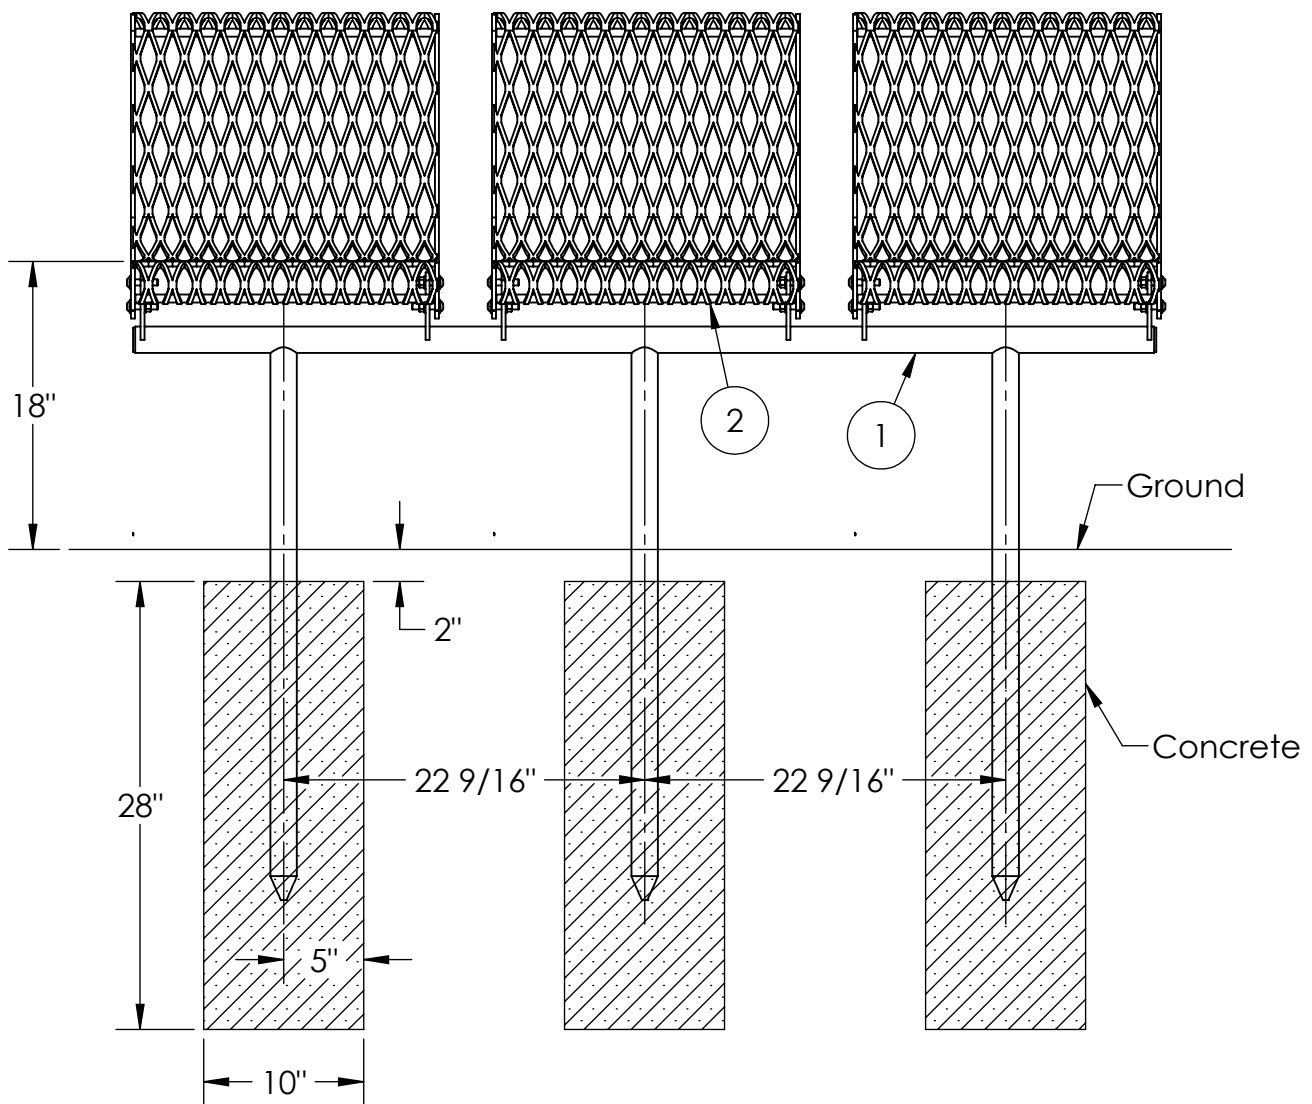


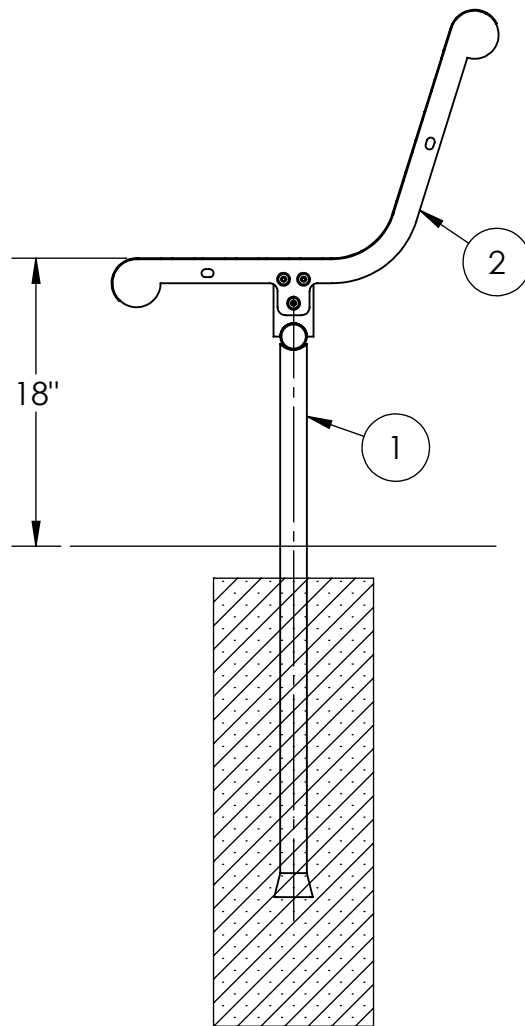

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	652-137	3 In Line Seat Direct Bury Stand	1
2	623-011	Single Contour Bench with back Expanded	3
3	516-031	3/8"x1-3/4" SS Btn Skt Cap Screw	18
4	516-023	3/8" SS Flat Washer	36
5	517-028	3/8" Zinc Nylock Nut	18

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Impact Gun (Optional)
- Drill

1. Bore 3no. 10" diameter holes into the ground as per drawing in desired location.
2. The holes should be at least 30" deep as shown or below the frost line in your area, which ever is greater.
3. Place 4-6" of pea rock in hole.
4. Drill out the plastic from all mounting holes on the seats and stand with a 7/16" drill bit.
5. Place the stand into the holes and support it.
6. Bolt the seats onto the stand using fixings provided. Do not tighten.
7. Level seats and adjust to desired height. Recommended height is 18" from the ground to the top of the seat as shown.
8. Fill the holes with concrete to approximately 2" below ground level or fill to no higher than ground level and crown the top so that water will run off.
9. Let stand for 24 hours before removing the supports

Periodic check of bolts tightness recommended



DETAIL A

In accordance to California law: WARNING - This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.