
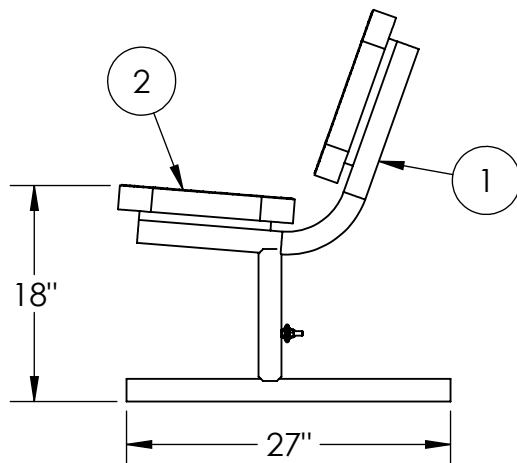


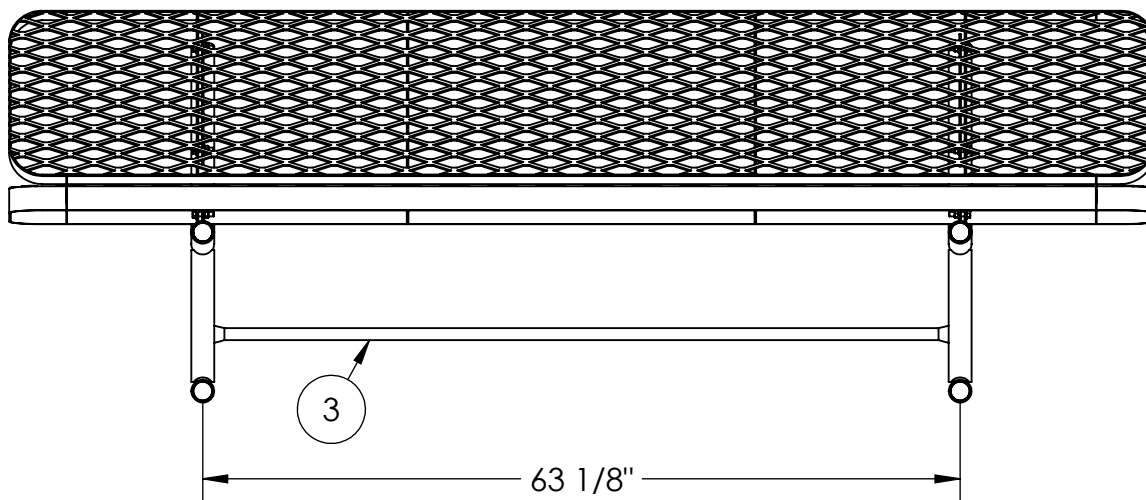


1. Drill plastic out of the mounting holes on the stands, seat and back using a 7/16" diameter drill bit.
2. Attach seat and back to the stands with fixings provided. Do not tighten up.
3. Attach the brace to the stands, set on level surface and tighten up all bolts.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	630-110	Supreme Bench With Back Stand FS	2
2	622-115	8' Supreme Champion Seat/Back (QS)	2
3	630-017	8' Bench Brace	1
4	516-058	3/8"x1-1/2" SS Hex Bolt	8
5	516-023	3/8" SS Flat Washer	18
6	516-028	3/8" SS Nylock Nut	10

**PREMIER POLYSTEEL**

The Best Commercial Outdoor Furniture Available. Period.



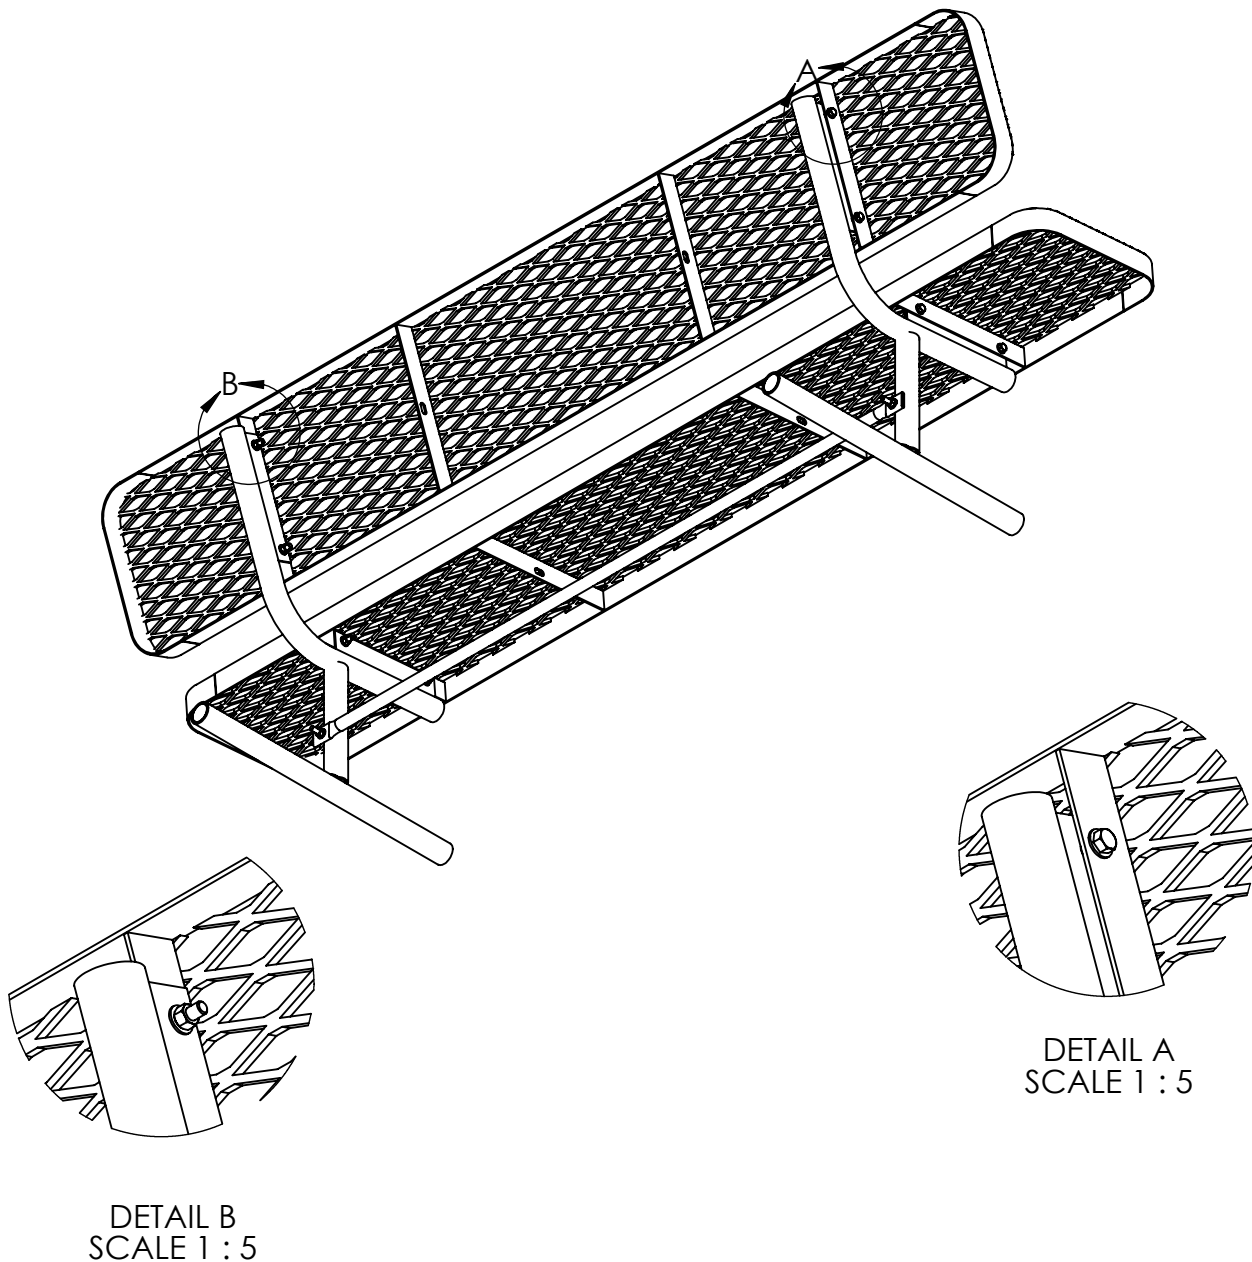

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Impact Gun (Optional)
- Drill

This product uses Hardware Pack HWPK03
(you may receive extra hardware)

- 8 qty. 3/8" x 1-1/2" SS Hex Bolt
- 10 qty. 3/8" SS Nylock Nut
- 18 qty. 3/8" SS Flat Washer

Periodic check of bolts tightness recommended

In Accordance to California law: WARNING This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

