


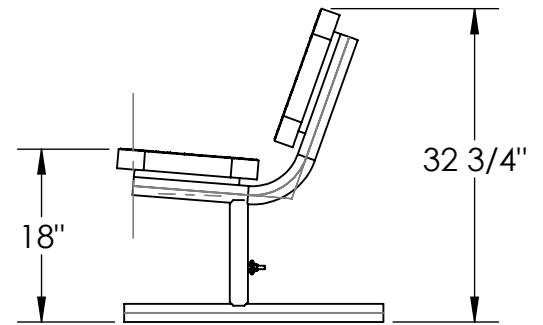


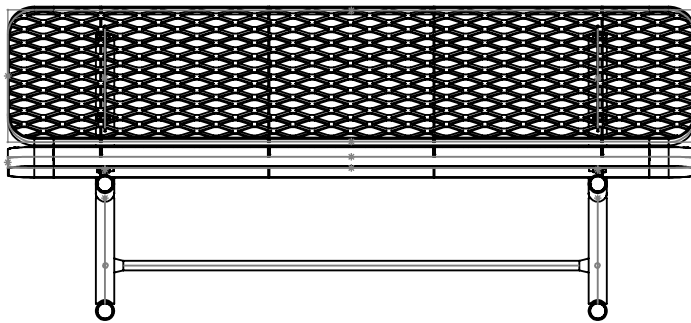

6' Supreme Expanded Metal Free Standing Bench with Back 936-301

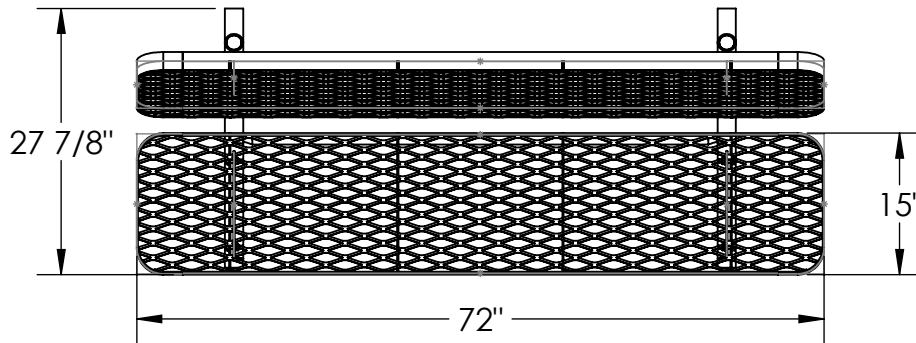

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	630-110	Supreme Bench With Back Stand FS	2
2	622-113	6' Supreme Champion Seat/Back (QS)	2
3	630-013	6' Free Standing Bench Brace	1
4	516-058	3/8"x1-1/2" SS Hex Bolt	8
5	516-028	3/8" SS Nylock Nut	10
6	516-023	3/8" SS Flat Washer	18

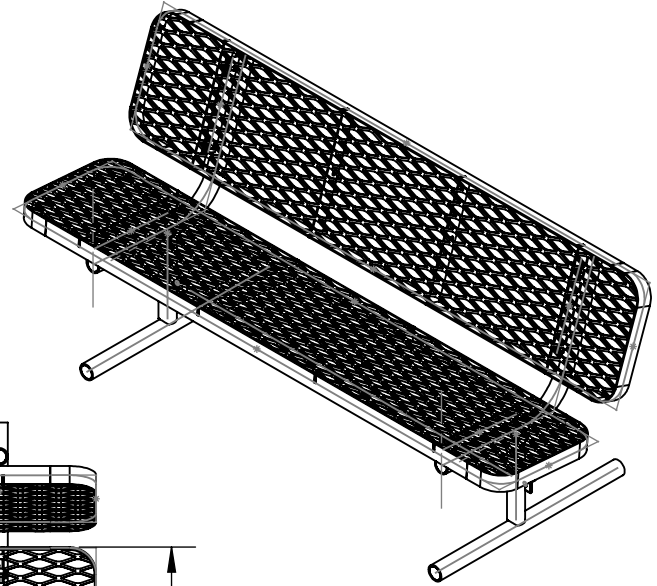


PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.



SIZE
A

REV. X.01 | SHEET 1 OF 2

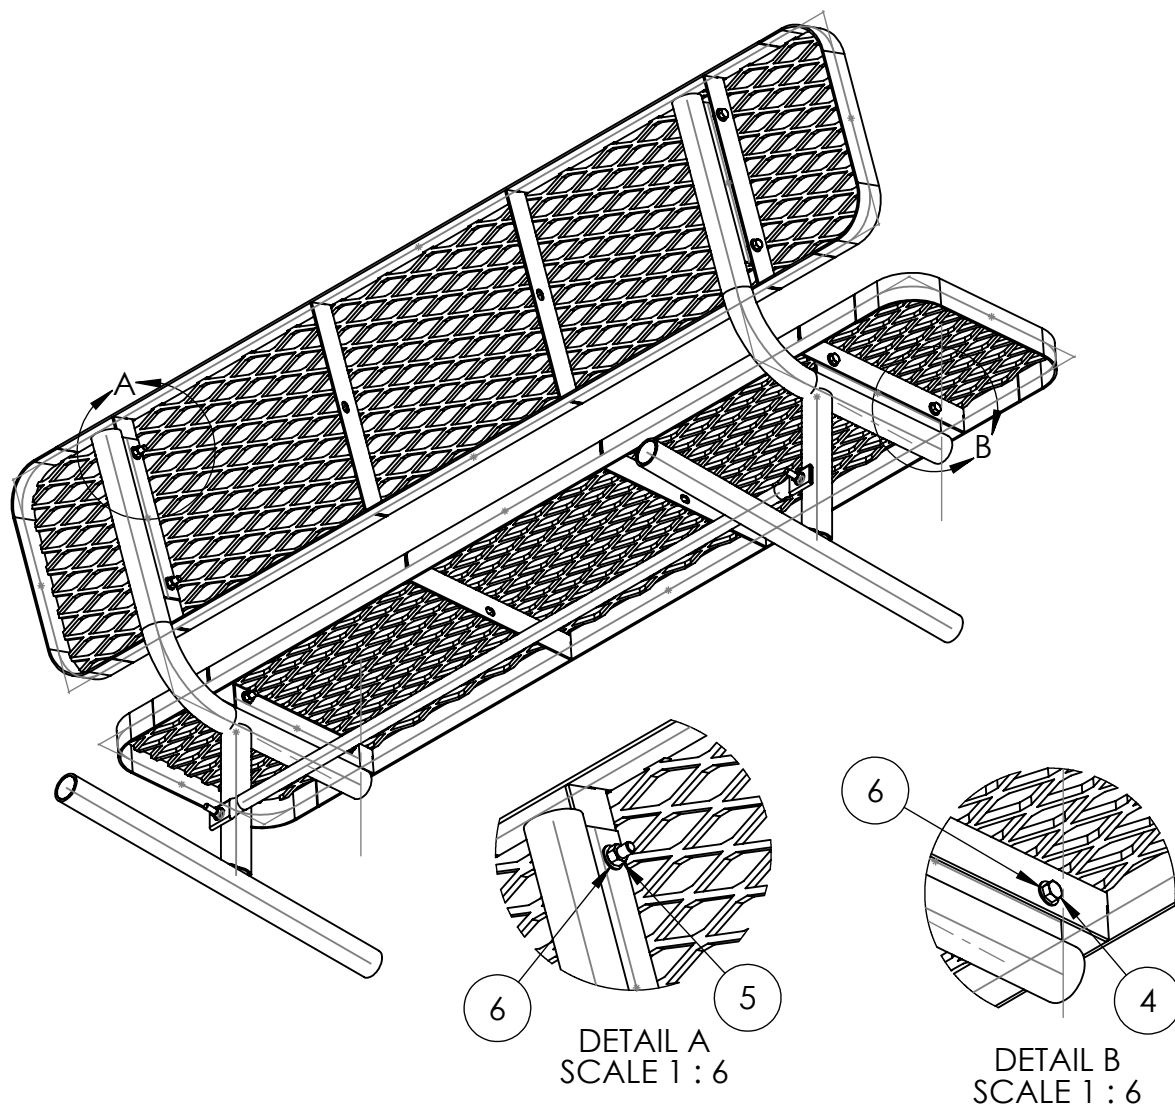

This product uses Hardware Pack HWPK03
(you may receive extra hardware)

8 qty. 3/8" x 1-1/2" SS Hex Bolt

10 qty. 3/8" SS Nylock Nut

18 qty. 3/8" SS Flat Washer

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Impact Gun (Optional)
- Drill

1. Drill plastic out of the mounting holes on the stands, seat and back using a 7/16" diameter drill bit.
2. Attach seat and back to the stands with fixings provided. Do not tighten up.
3. Attach the brace to the stands, set on level surface and tighten up all bolts.

Periodic check of bolts tightness recommended



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

