



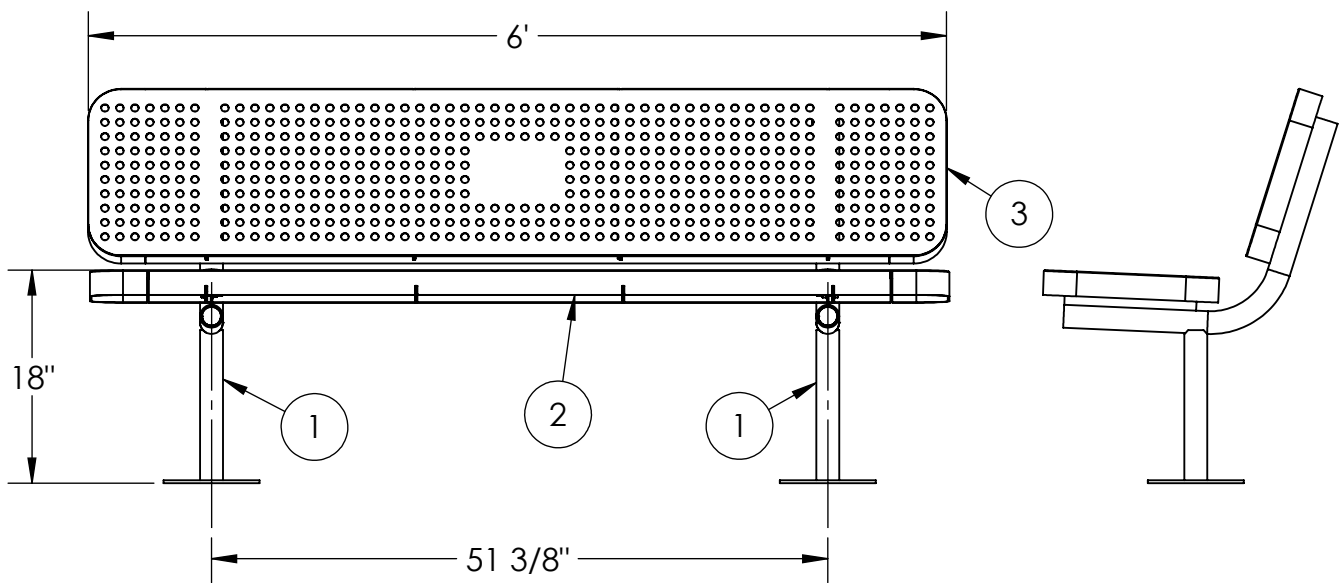

6' Champion Supreme Perforated Memorial Surface Mount Bench with Back

910-3M7

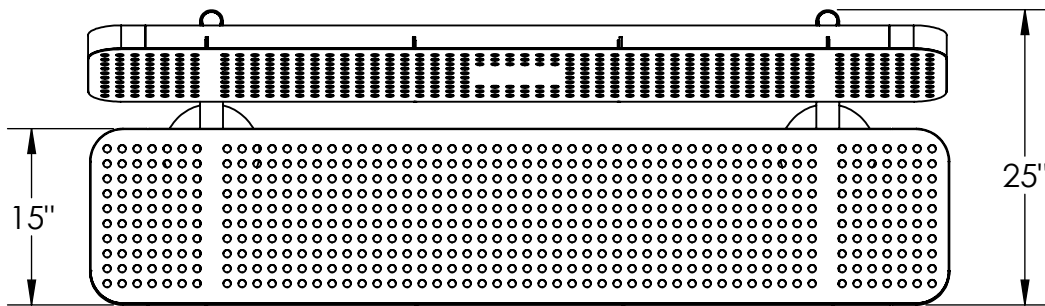

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	633-112	Supreme Stand With Back SM	2
2	622-1P3	6' Supreme Perforated Metal Seat/Back	1
3	622-1PM3	6' Perforated Supreme Champion Seat/Back	1
4	516-058	3/8"x1-1/2" SS Hex Bolt	8
5	517-028	3/8" Zinc Nylock Nut	8
6	516-023	3/8" SS Flat Washer	16



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.



SIZE


A

Sheet 1 OF 2



6' Champion Supreme Perforated Memorial Surface Mount Bench with Back

910-3M7

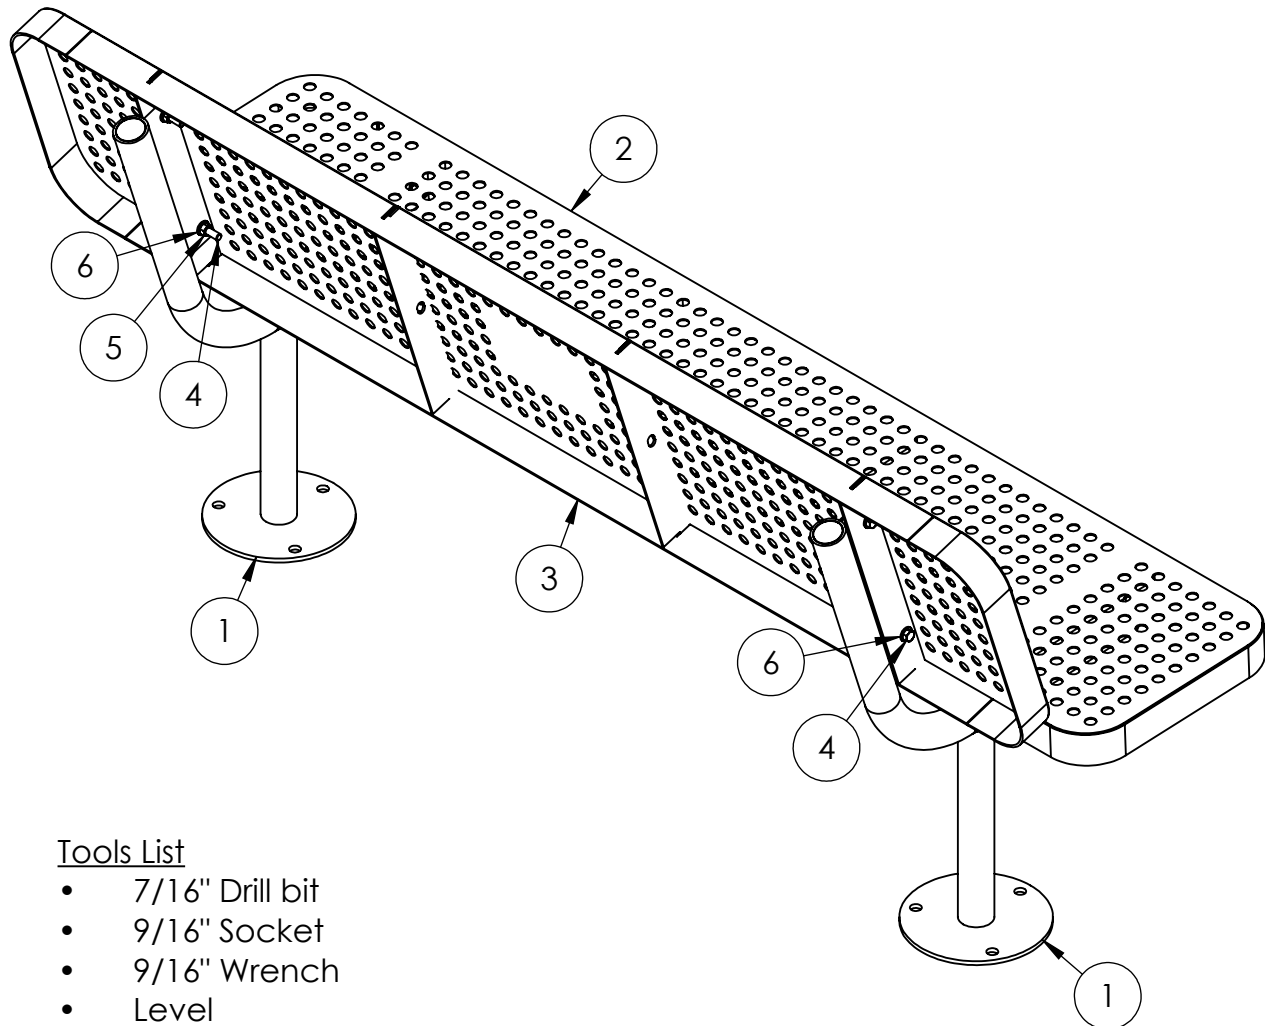

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Impact Gun (Optional)
- Drill

1. Drill plastic out of the mounting holes on the stands and seats using a 7/16" diameter drill bit.
2. Attach seat to the stands with fixings provided and tighten up.
3. Stand the bench in its final location and mark out base holes.
4. Move the bench to a safe place and drill holes.
5. Place the bench back, level and secure down using appropriate fixings for the ground material.

Periodic check of bolts tightness recommended



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

