




6' Supreme Expanded Metal Direct Bury Memorial Bench with Back

936-3M2

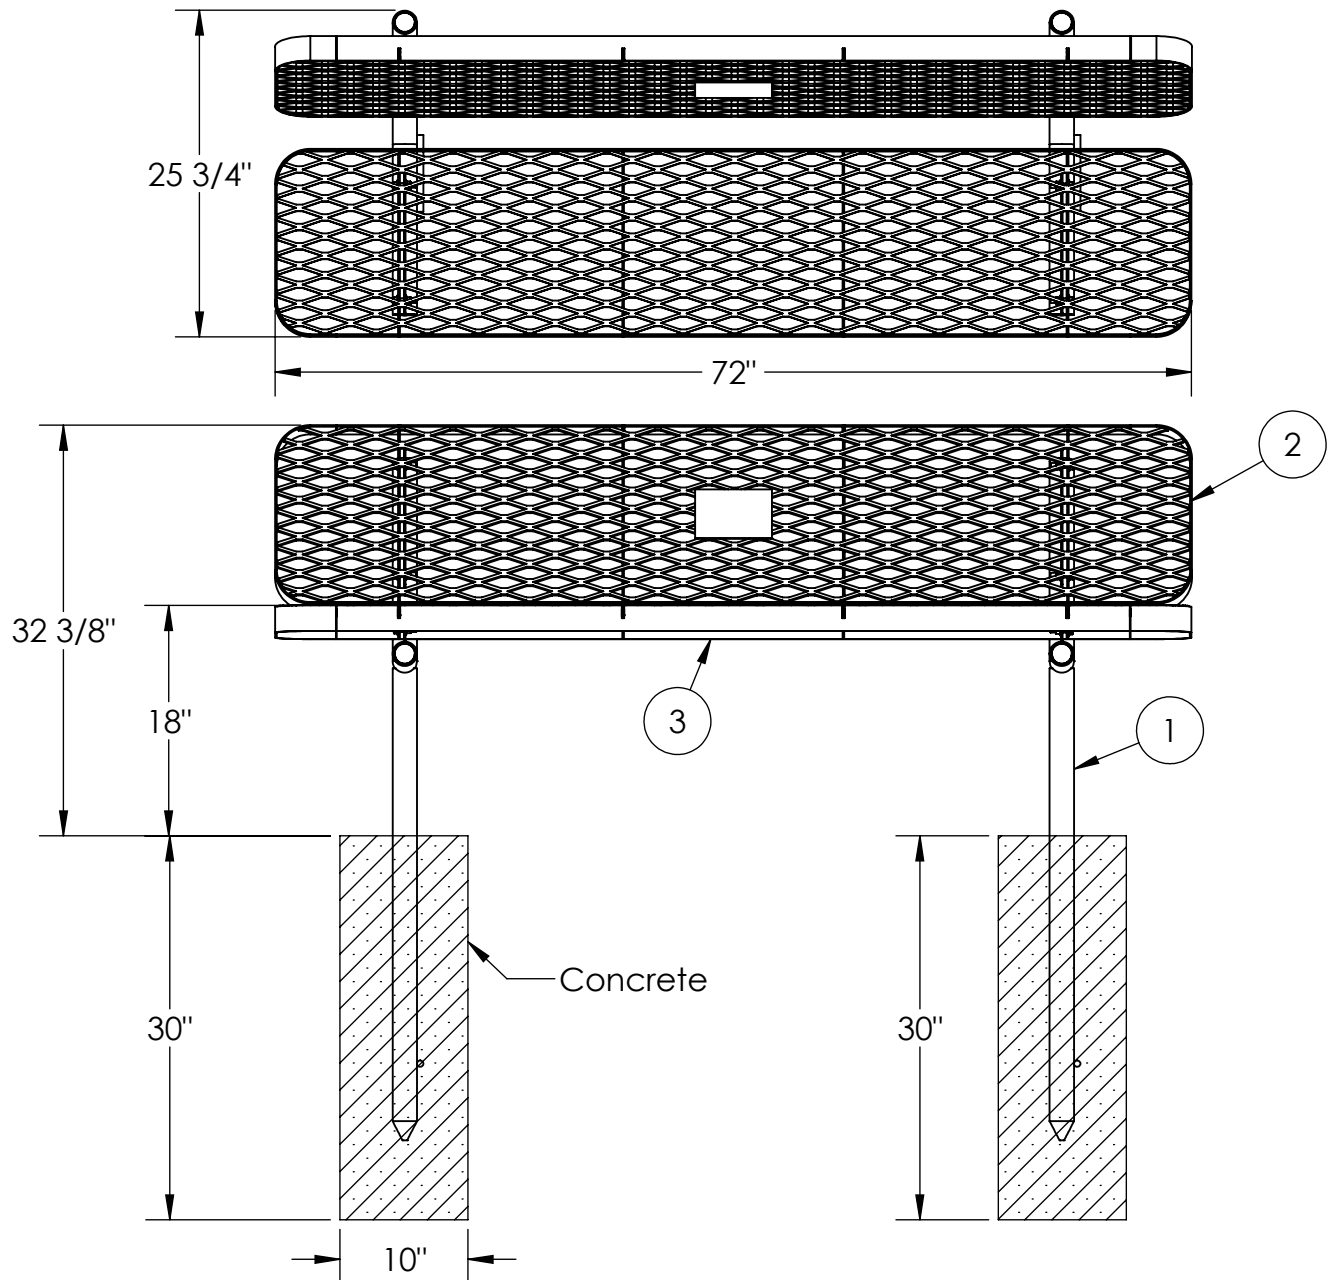

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	630-120	Extended Supreme with Back Direct Bury Stand	2
2	622-M113	6' Supreme Champion Seat/Back (QS)	1
3	622-113	6' Supreme Champion Seat/Back (QS)	1
4	516-058	3/8"x1-1/2" SS Hex Bolt	8
5	516-028	3/8" SS Nylock Nut	8
6	516-023	3/8" SS Flat Washer	16



PREMIER POLYSTEEL




The Best Commercial Outdoor Furniture Available. Period.





6' Supreme Expanded Metal Direct Bury Memorial Bench with Back

936-3M2

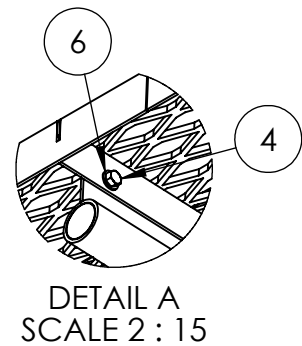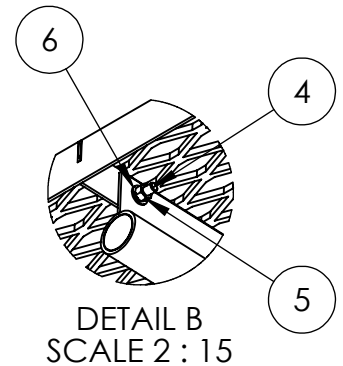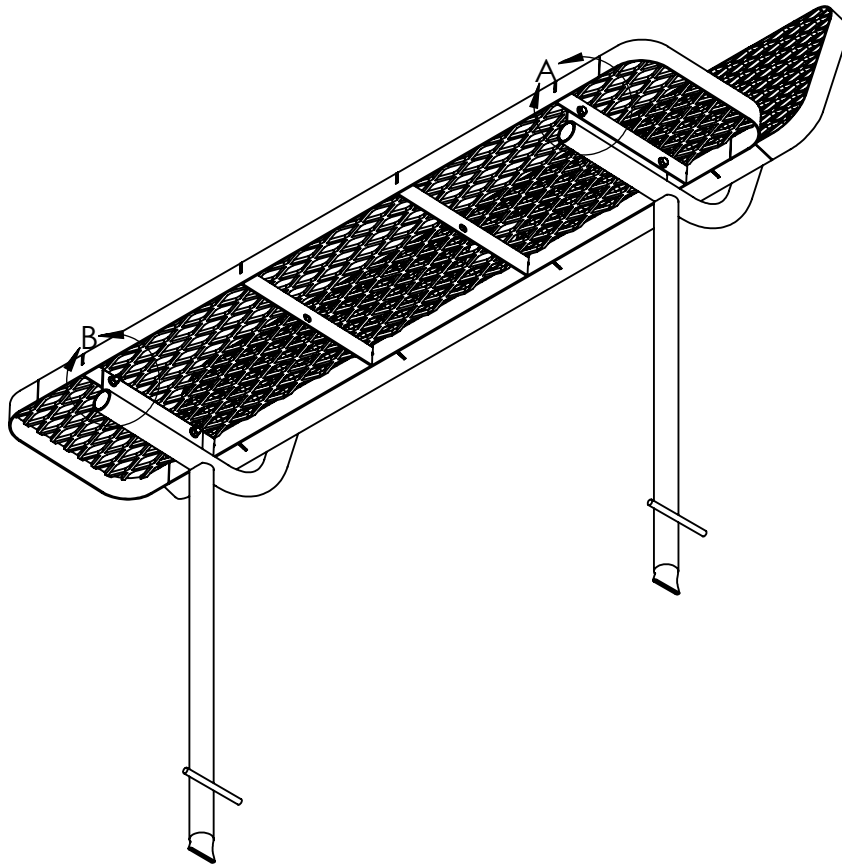

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Impact Gun (Optional)
- Drill
- Level

This product uses Hardware Pack HWPk04
(you may receive extra hardware)

8 qty. 3/8" x 1-1/2" SS Hex Bolt
8 qty. 3/8" SS Nylock Nut
16 qty. 3/8" SS Flat Washer

1. Drill plastic out of the mounting holes on the legs, seat and back using a 7/16" diameter drill bit.
2. Bolt the seat and back to the legs and tighten up.
3. Mark out the holes for the legs on the ground in the desired location. Drill 10" diameter holes at each location to a minimum depth of 30". You need to be below the frost line in your area.
4. Place the seat into the holes and support at the desired height. Level the seat.
5. Fill the holes with concrete and crown the top so that water will run off. Let stand for 24 hours before removing the supports.

Periodic check of bolts tightness recommended



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

