





6' Champion Supreme Direct Bury Expanded Metal Buddy Bench with Back


936-3B2

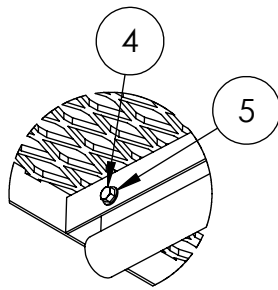

DETAIL A

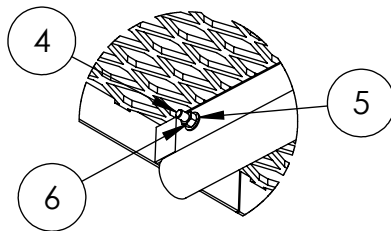

DETAIL B

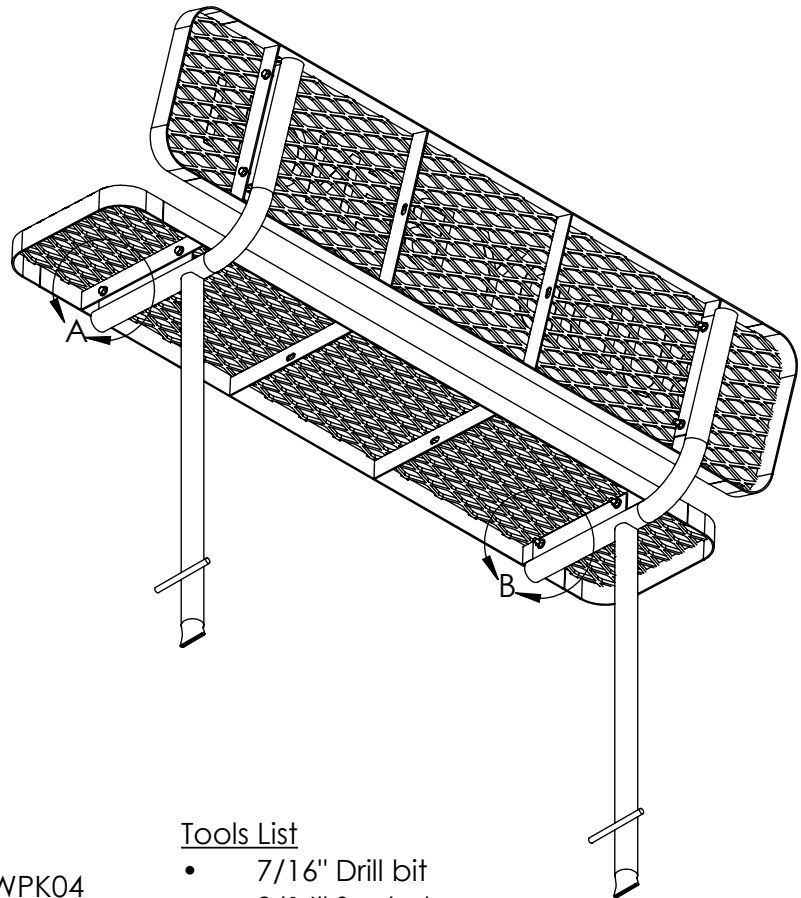

This product uses Hardware Pack HWPK04
(you may receive extra hardware)

8 qty. 3/8" x 1-1/2" SS Hex Bolt

8 qty. 3/8" SS Nylock Nut

16 qty. 3/8" SS Flat Washer

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Impact Gun (Optional)
- Drill

1. Drill plastic out all mounting holes on the legs, seat and back using a 7/16" drill bit.
2. Bolt the seat and back to the legs using fixings provided and tighten up.
3. Mark out the holes for the legs on the ground in the desired location.
4. Bore two 10" diameter holes into the ground. The holes should be at least 32" deep as shown or below the frost line in your area, which ever is greater.
5. Place 4-6" of pea rock in hole.
6. Place the legs into the holes and support them.
7. Level the bench and adjust to desired height. Recommended height is 18" from the ground to the top of the seat.
8. Fill the holes with concrete to approximately 2" below ground level or fill to no higher than ground level and crown the top so that water will run off.
9. Let stand for 24 hours before removing the supports.

Periodic check of bolts tightness recommended



PREMIER POLYSTEEL


The Best Commercial Outdoor Furniture Available. Period.





6' Champion Supreme Direct Bury Expanded Metal Buddy Bench
with Back

936-3B2

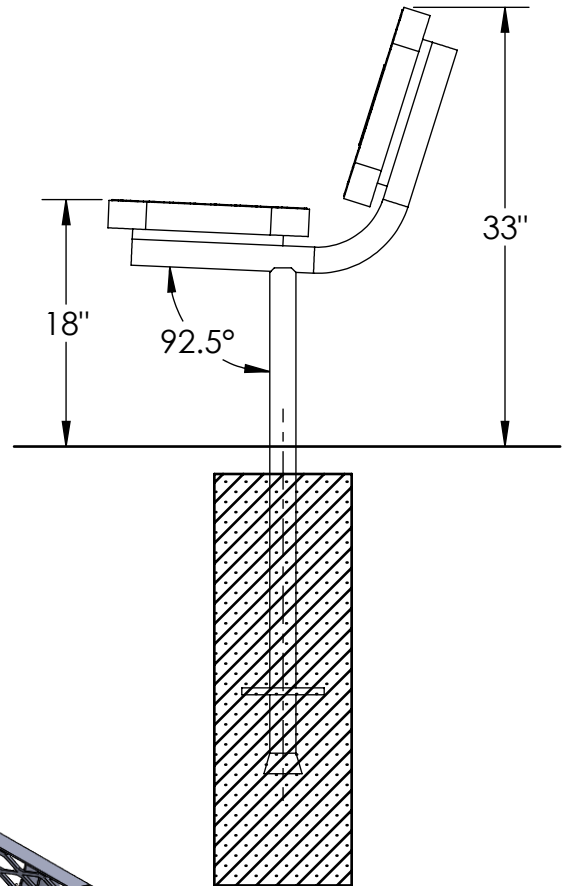

PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.



SIZE
A

Sheet 3 OF 3