


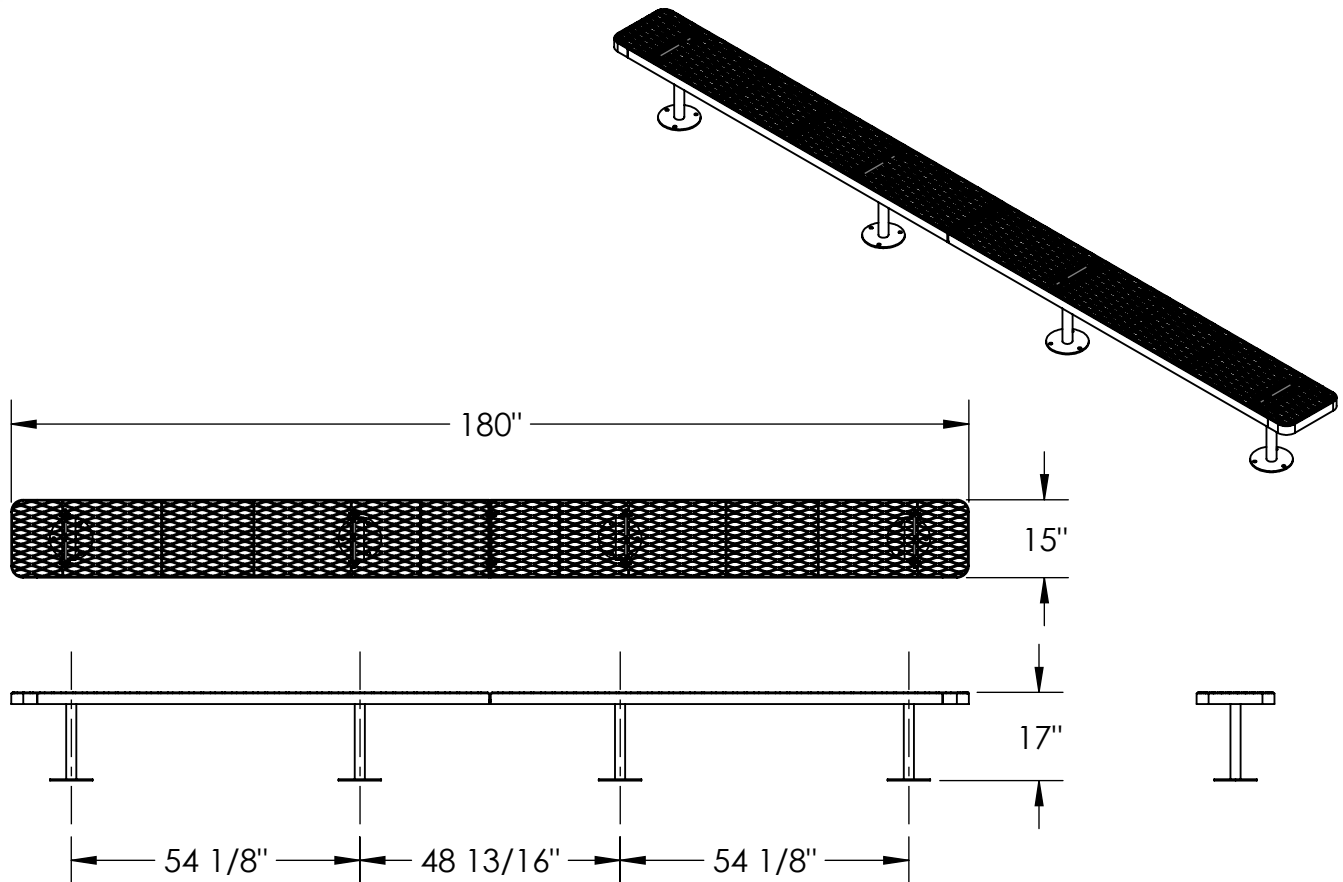

1. Drill plastic out of the mounting holes on the stands and seats using a 7/16" diameter drill bit.
2. Attach the seats together laying upside down on a flat surface.
3. Attach seat to the stands with fixings provided and tighten up.
4. Stand the bench in its final location and mark out base holes.
5. Move the bench to a safe place and drill holes.
6. Place the bench back, level and secure down using appropriate fixings for the ground material.

Periodic check of bolts tightness recommended


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	622-118	15' Supreme Seat/Back	2
2	633-111	Supreme Bench Without Back stand SM	4
3	516-058	3/8"x1-1/2" SS Hex Bolt	10
4	516-023	3/8" SS Flat Washer	20
5	516-028	3/8" SS Nylock Nut	10



PREMIER POLYSTEEL


The Best Commercial Outdoor Furniture Available. Period.



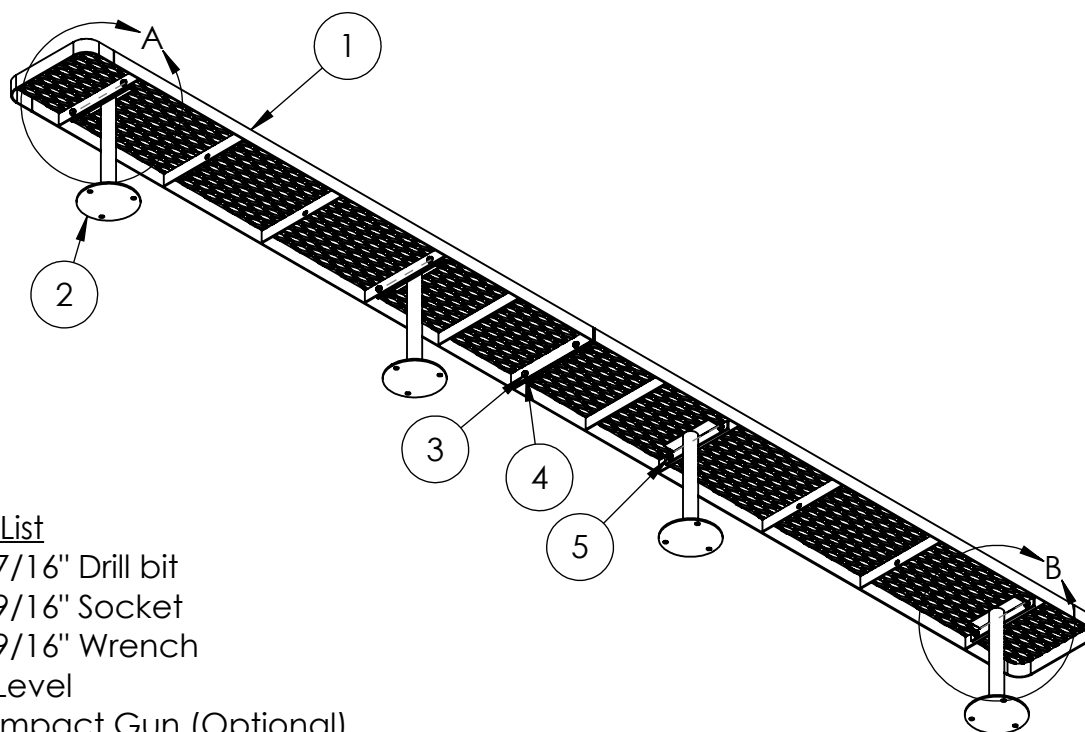


Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Impact Gun (Optional)
- Drill

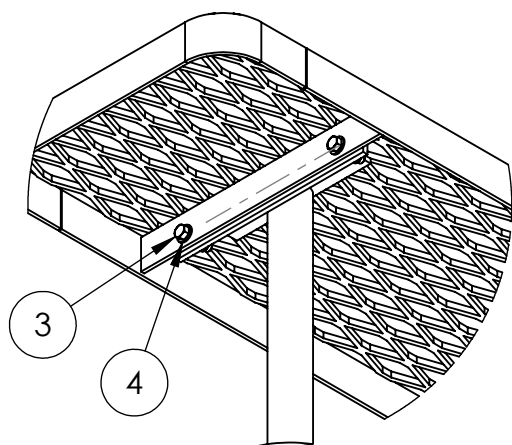

DETAIL A
SCALE 1 : 8

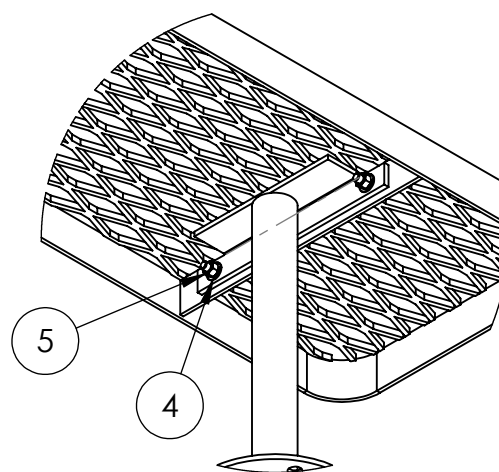

DETAIL B
SCALE 1 : 8



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

