


10' Champion Supreme Expanded Metal Free Standing Bench without Back



937-601

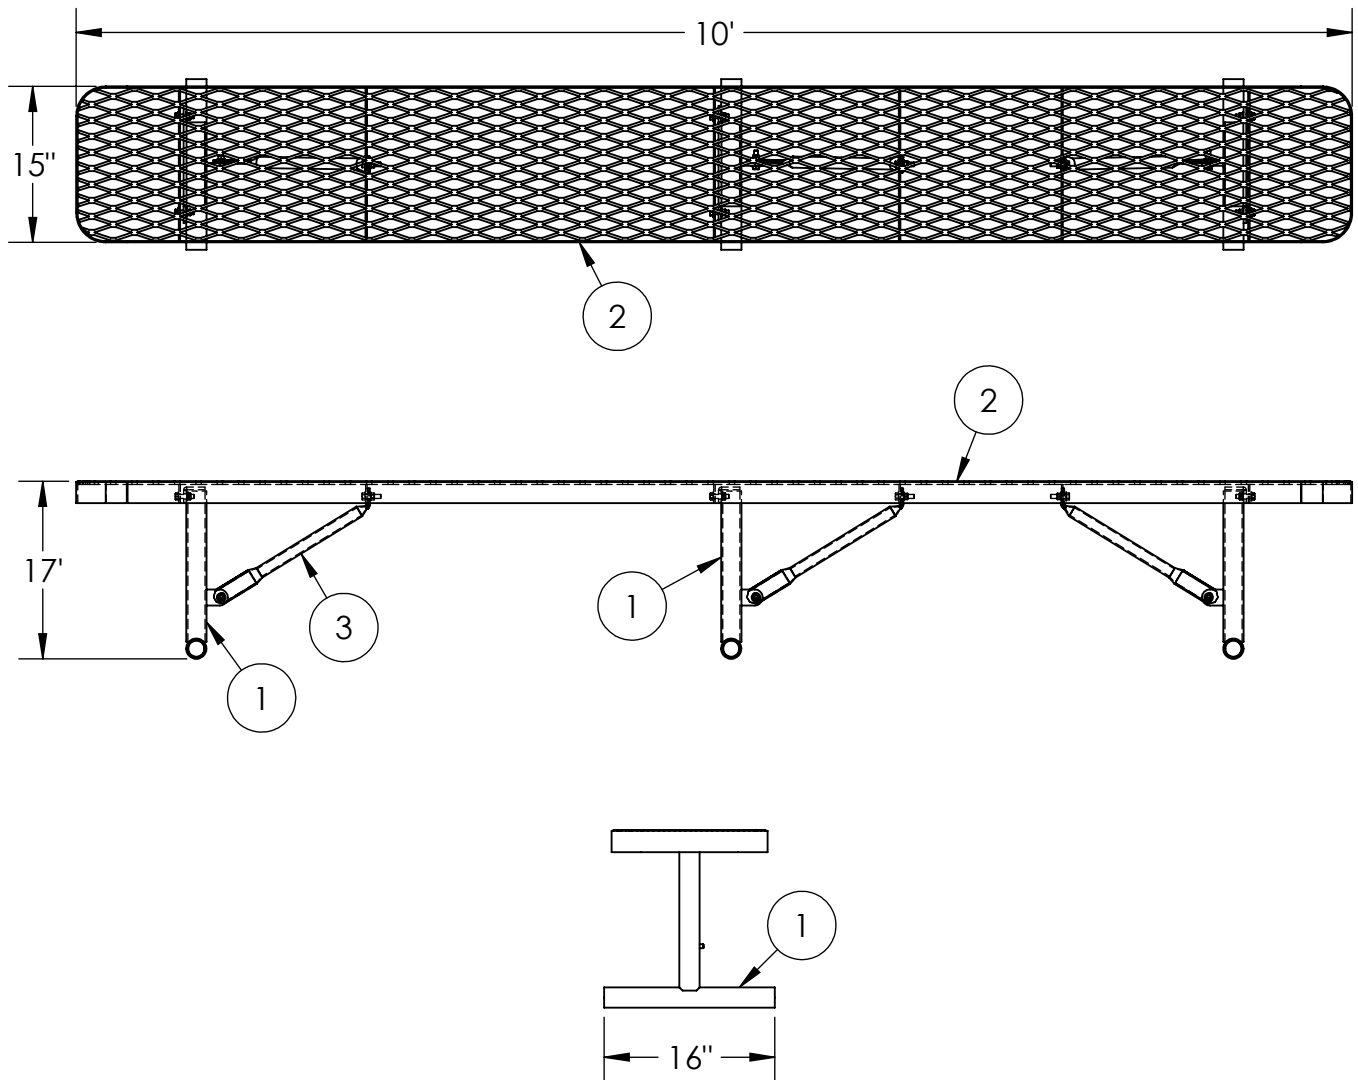


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	631-110	Supreme Bench Without Back Stand FS	3
2	622-116	10' CHAMPION SUPREME SEAT/BACK	1
3	631-313	Free Standing Bench wo\back Brace	3
4	516-058	3/8"x1-1/2" SS Hex Bolt	12
5	516-023	3/8" SS Flat Washer	24
6	516-028	3/8" SS Nylock Nut	12

10' Champion Supreme Expanded Metal Free Standing Bench without Back

937-601

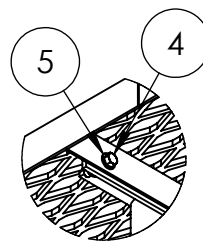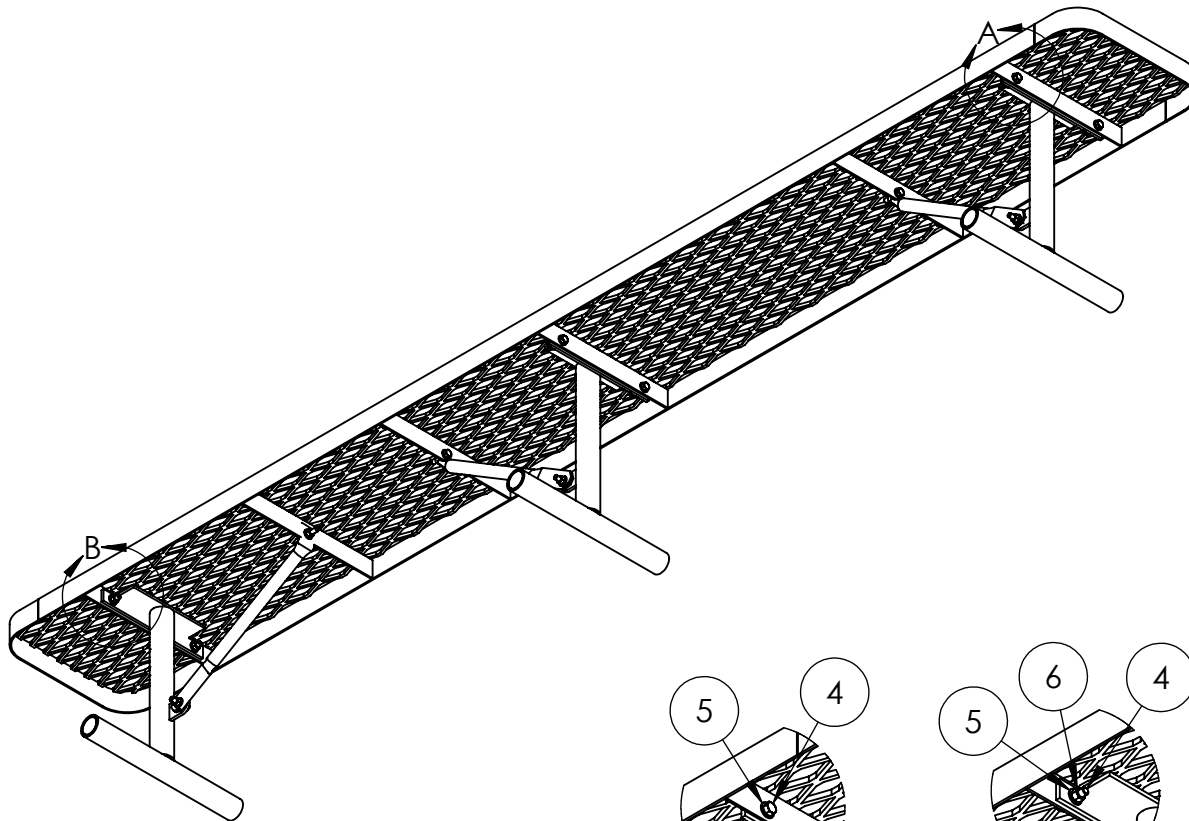

DETAIL A
SCALE 1 : 9

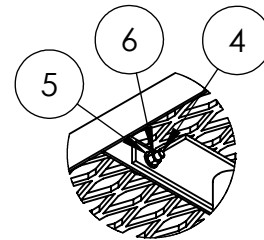

DETAIL B
SCALE 1 : 9

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- 7/32" Allen Wrench
- Drill

1. Drill plastic out of the mounting holes on the seat, stands and braces using a 7/16" diameter drill bit.
2. Bolt the seat to the stand and braces loosely using fixings provided. Set on level surface and tighten up.

Periodic check of bolts tightness recommended

In accordance to California law: WARNING - This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.