


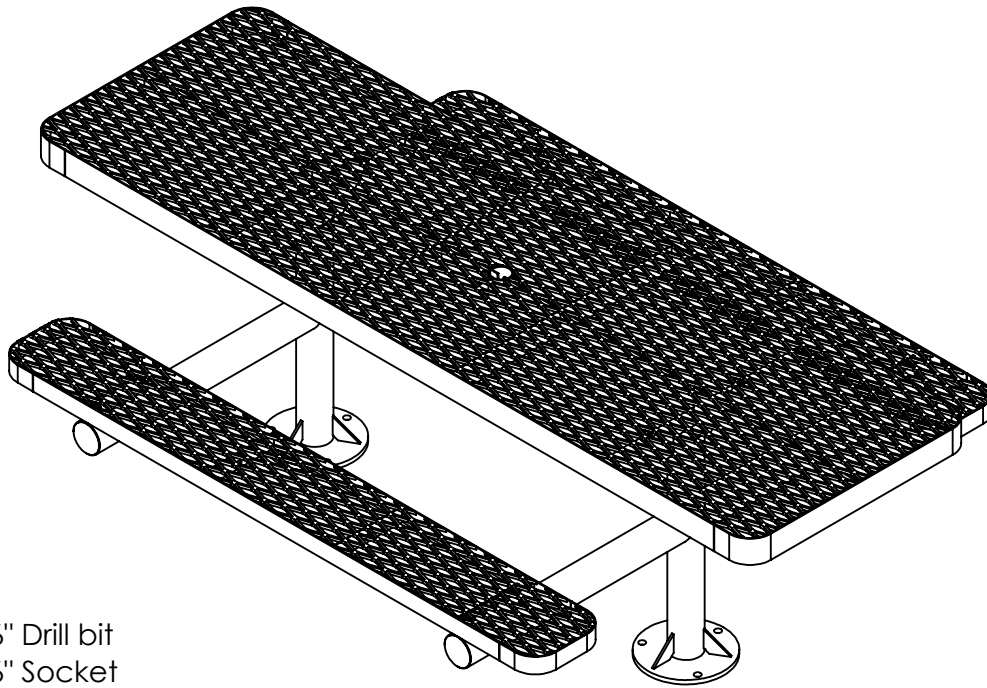

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Impact Gun (Optional)
- Drill

1. Drill plastic out of the mounting holes on the stands, seats and table using a 7/16" diameter drill bit.
2. Attach the seats and table to the stands with fixings provided and tighten up.
3. Stand the table in its final location and mark out base holes.
4. Move the table to a safe place and drill holes.
5. Place the table back, level and secure down using appropriate fixings for the ground material.

Periodic check of bolts tightness recommended

In accordance to California law: WARNING - This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

