




Perforated Bar Height Chair

980-1P1

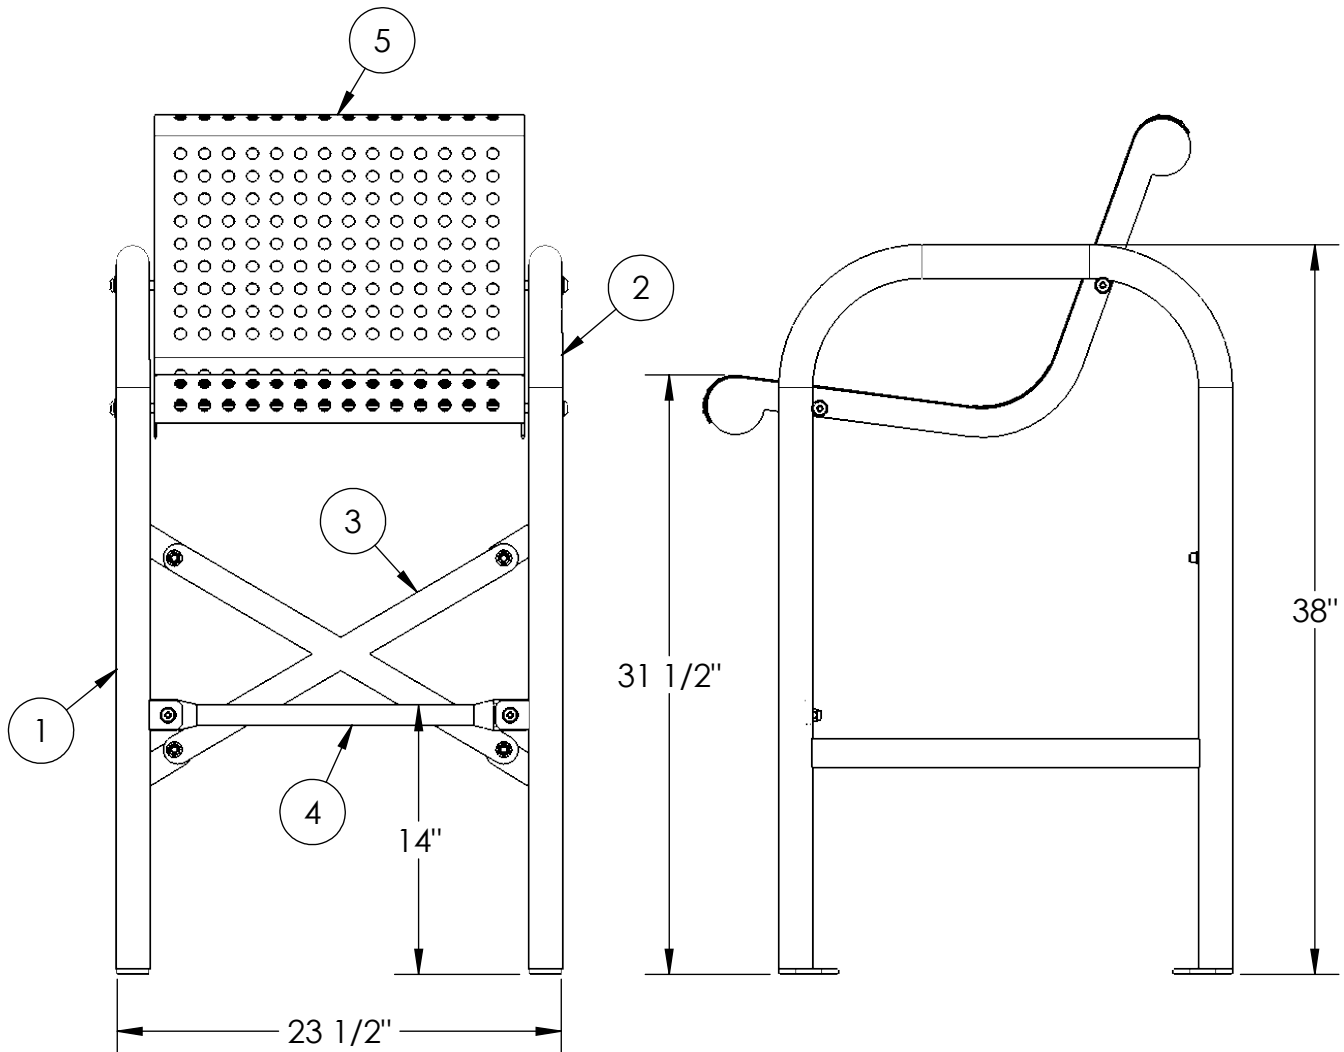

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	639-502	Right Bar Height Patio Chair Stand	1
2	639-503	Left Bar Height Patio Chair Stand	1
3	634-548	Patio Bar Height Chair X Brace	1
4	634-544	Patio Bar Height Foot Brace	1
5	623-0P7	Patio Perforated Chair	1
6	516-044	3/8"x1-1/2" SS Btn Skt Cap Screw	6
7	516-023	3/8" SS Flat Washer	20
8	516-028	3/8" SS Nylock Nut	10
9	516-056	3/8"x2-3/4" Btn Skt Cap Scr.	4



PREMIER POLYSTEEL


The Best Commercial Outdoor Furniture Available. Period.





Perforated Bar Height Chair

980-1P1

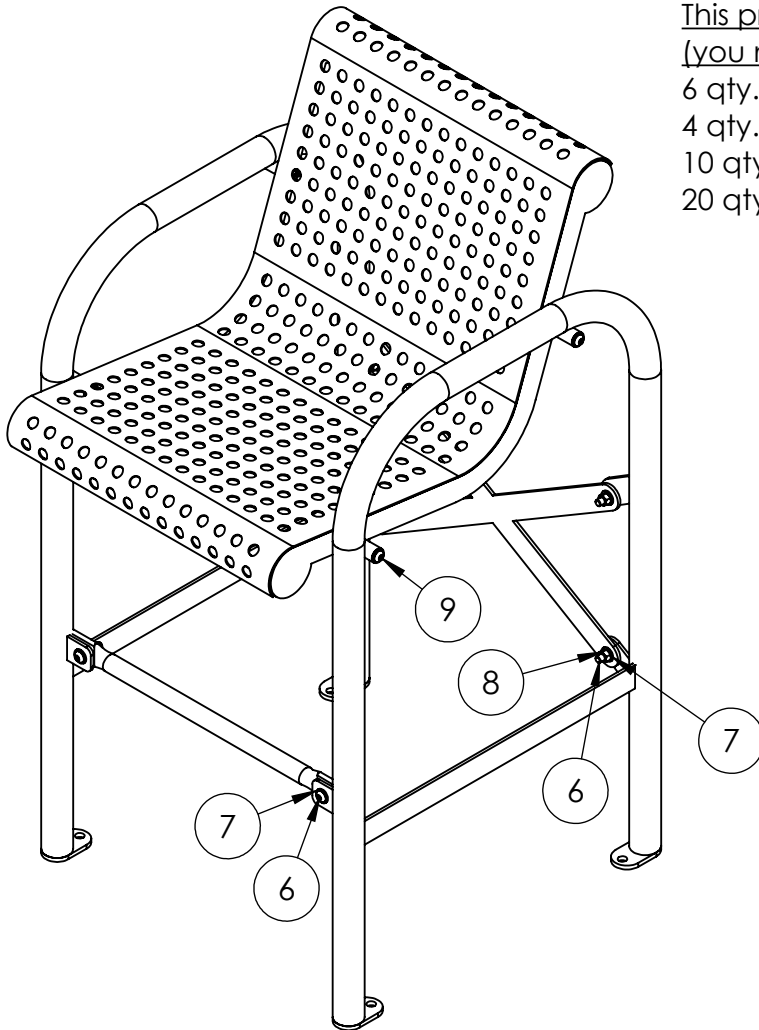

This product uses Hardware Pack HWPK16 (you may receive extra hardware)

6 qty. 3/8" x 1-1/2" SS BSCS

4 qty. 3/8" x 2-3/4" SS BSCS

10 qty. 3/8" SS Nylock Nut

20 qty. 3/8" SS Flat Washer

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- 7/32" Hex Key
- Level
- Impact Gun (Optional)
- Drill

1. Drill the plastic out of the mounting holes on the seat, stands and braces using a 7/16" dia. drill bit.
2. Fasten the seat to the stands and attach the braces to the stands loosely.
3. Tighten up the bolts on the braces.
4. Tip the chair to upright position and tighten all bolts evenly so the chair does not lean to one side or the other.

Periodic check of bolts tightness recommended

In Accordance to California law: WARNING This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

