

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|----------------------------|------|
| 1 | 633-112 | Supreme Stand With Back SM | 2 |
| 2 | 622-115 | 8' Supreme Champ Seat/Back | 2 |
| 3 | 516-058 | 3/8"x1-1/2" SS Hex Bolt | 8 |
| 4 | 516-023 | 3/8" SS Flat Washer | 16 |
| 5 | 516-028 | 3/8" SS Nylock Nut | 8 |




PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.





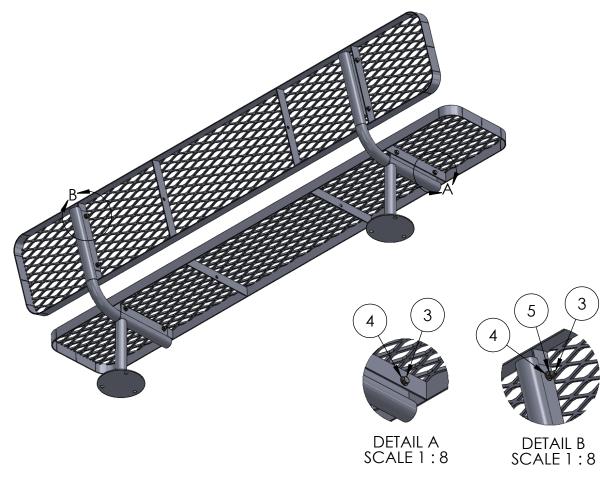

- 1. Drill plastic out of the mounting holes on the stands, seat and back using a 7/16" diameter drill bit.
- 2. Attach seat and back to the stands with fixings provided. Do not tighten up.
- 3. Attach the brace to the stands and tighten up all bolts.
- 4. Stand the bench in its final location and mark out base holes.
- 5. Move the bench to a safe place and drill holes.
- 6. Place the bench back, level and secure down using appropriate fixings for the ground material.

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Imapet Gun (Optional)
- Drill

Periodic check of bolts tightness reccommended

In accordance to California law: WARNING - This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period

