


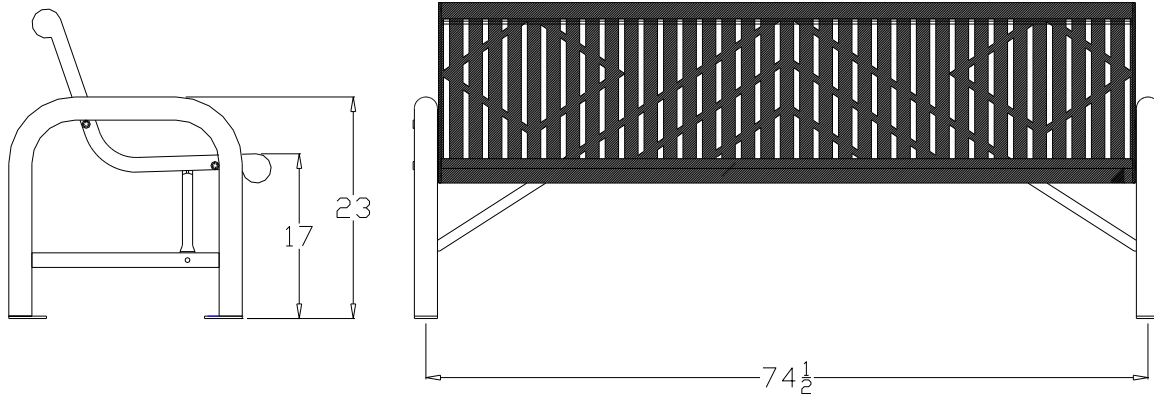

971-303



Part No.	Description	Qty.
625-005	6' Contour FlatRib Seat	1
733-013	Grand Contour Stand	2
631-313	Contour Bench Brace	2
516-033	3/8"x4" SS Button Socket Cap	4
516-058	3/8"x1-1/2" SS Hex Bolt	4
516-028	3/8" SS Nylock Nuts	8
516-023	3/8" SS Flat Washer	16

- 1 Drill plastic out of the mounting holes on the seat, braces and stands using a 7/16" dia. drill bit.
- 2 Fasten the seat to the stands loosely and then fasten the brace to the stands and seat.
- 3 Make sure the bench is level and tighten all of the bolts.

In Accordance to California law: WARNING This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

Periodic check of bolt tightness recommended.