




974-S12

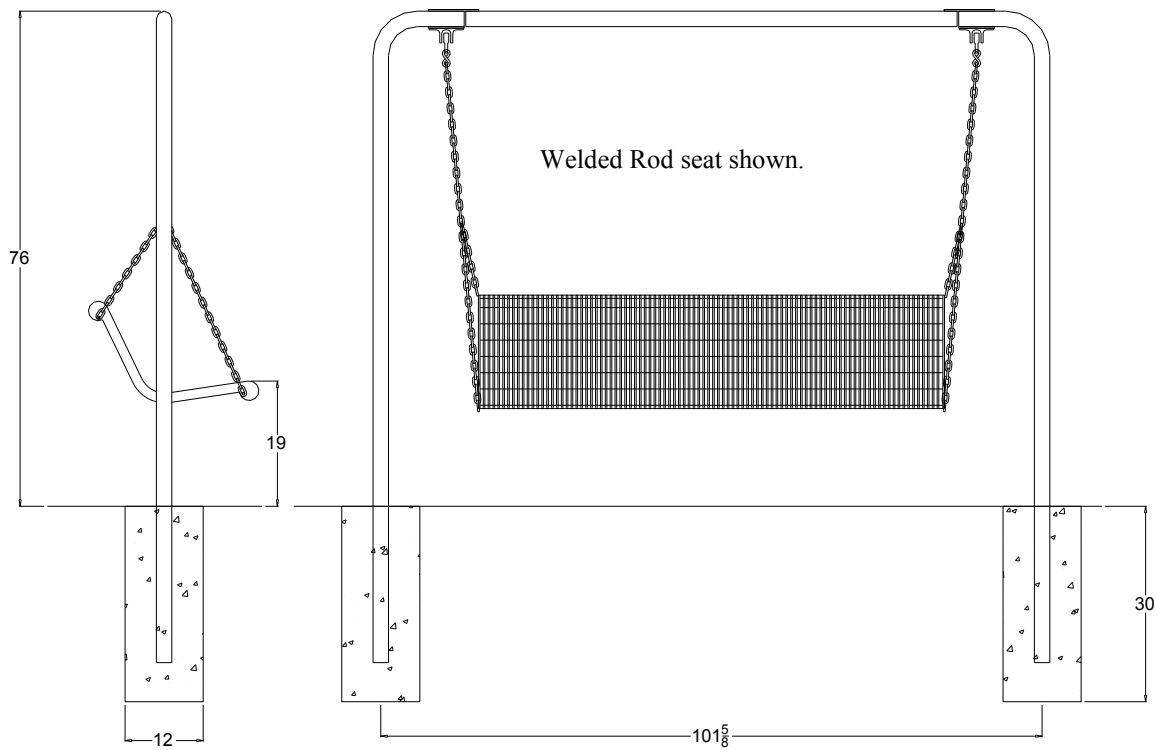


Part No.	Description	Qty.
623-015	6' Grand Contour Exp Seat	1
635-002	Contour Swing Post	2
635-032	6ft Contour Swing Brace	1
635-100	Contour Swing Chain Harness	2
SH105	Wood Beam Hanger	2
H-14	S-HOOK	2
516-058	3/8" X 1-1/2" SS Hex Bolt	4
516-028	3/8" SS Nylock Nut	4
516-023	3/8" SS Flat Washer	8
516-065	1/2" X 5" SS Hex Bolt	4
516-036	1/2" SS Nylock Nut	4
516-027	1/2" SS Flat Washer	4





- 1 Drill the plastic out of the mounting holes on the Swing Post and Swing Brace using a 1/2" dia. drill bit.
- 2 Fasten the Post, Brace and Wood Beam Hanger together using the 1/2" x 5" Hex Bolts, 1/2" Washers and 1/2" Nylock Nuts as shown. Repeat on the other end of the Brace using another Post and Wood Beam Hanger.
- 3 Tighten all of the bolts.
- 4 Locate the swing and drill two 12" dia holes or larger in the ground as shown.
- 5 Secure the posts in the holes and fill the holes with concrete.
- 6 Drill the plastic out of the bench mounting holes located at both ends of the bench. Use a 7/16" dia. Drill bit.
- 7 Attach the Chain Harness to the Contour Seat as indicated below. Use the 3/8" x 1-1/2" Hex Bolts, 3/8" Washers and 3/8" Nylock Nuts.
- 8 Attach the S-Hooks to the Chain Harness as indicated below.
- 9 When the concrete has set attach the other end of the S-Hooks to the Wood Beam Hanger. Be sure to crimp the S-Hooks completely.
- 10 Make sure all fasteners are secure.

In Accordance to California law: WARNING This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

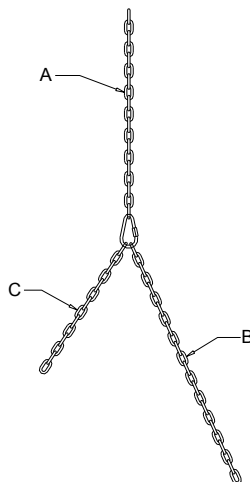

- A. (APPROX. 24" Long) Attaches to the S-Hook which attaches to the Wood Beam Hanger.
- B. (APPROX. 30" Long) Attaches to the front of the Contour Seat.
- C. (APPROX. 18" Long) Attaches to the back of the Contour Seat.

Periodic check of bolt tightness recommended.

