


99DBKIT

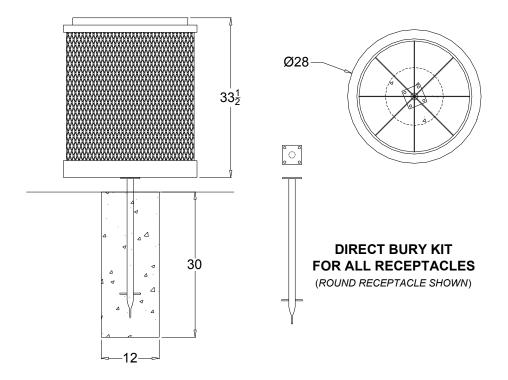

Part No.	Description	Qty.
653-072	Direct Bury Post	1
516-058	3/8"x1-1/2" Hex Head Bolt	4
516-028	3/8" SS Nylock Nut	4
516-023	3/8" SS Flat Washer	8

Assembly Instructions

- 1 With a post hole auger drill a hole in the ground 30" deep in the desired location.
- 2 Drill out the holes in the mounting plate of the post with a 7/16" dia. drill bit. Also drill out the holes in the mounting plate of the garbage receptacle base.
- 3 Place the direct bury post into the center of the ground hole and support it in place. Make sure that the top of the post is level. If the top mounting plate is not level, the receptacle will not stand straight. The base of the receptacle can be installed to the post prior to securing the post in the ground hole. If the base is installed to the post you may have to clean concrete from the base after filling the hole. (Note: The distance between the ground and the bottom of the receptacle is your choice. You need to leave enough room to install the fasteners.)
- 4 Fill the hole with concrete after the post is leveled. We suggest that you fill the hole slightly higher then ground level and crown the top of the concrete so that water doesn't pool under the receptacle.
- 5 After the concrete has set you can continue with the receptacle installation.

In Accordance to California law: WARNING This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

Periodic check of bolt tightness recommended.

6" S	6" Surface Mount Stand for Receptacle		99SMKIT
Ø	4" 0 4" 0 4" 1/2"		0 0
6''			
 Drill holes in the are using. Install stand wit Screw the hext top of the stand 	where you want the receptac concrete using the recommon h the anchors and tighten the polts, with washer, through the d. washer, then the Nylock nut a	ended drill bit for the em down securely. e holes in the recep	e size of anchors you tacle base plate and
Item Part #	Description	Qty.	
1 653-074	6" Surface Mount Stand		
2 516-058 3 516-028	3/8"x1-1/2" SS Hex Bolt 3/8" SS Nylock Nut	4	
4 516-023	3/8" SS Flat Washer	8	
In Accordance to Cal	ifornia law: WARNING This produc f California to cause cancer and	t contains a chemical	
A			REV. X.01 SHEET 1 OF 1