

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|---|------|
| 1 | 642-0P5 | 8' Perforated Champion Table Top | 1 |
| 2 | 622-0P5 | 8' Perforated Champion Seat/Back | 2 |
| 3 | 634-010 | Free Standing Table Stand For 10" Seats | 2 |
| 4 | 634-013A | Table Brace | 2 |
| 5 | 516-058 | 3/8"x1-1/2" SS Hex Bolt | 16 |
| 6 | 516-023 | 3/8" SS Flat Washer | 32 |
| 7 | 516-028 | 3/8" SS Nylock Nut | 16 |




PREMIER POLYSTEEL







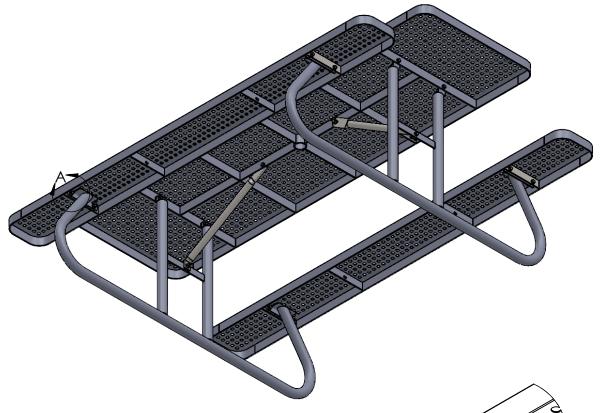

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- 7/32" Allen Wrench
- Drill



- 1. Drill plastic out of the mounting holes using a 7/16" diameter drill bit.
- 2. Attach both legs to the inside of the table support bar (see view A above).
- 3. Attach the seats to the legs.
- 4. Attach the straight end of each brace to the table (see view above).
- 5. Attach the bent end of each brace to the cross bar of each leg (see view above).
- 6. Tighten up all fixings.

Periodic check of bolts tightness reccommended

In accordance to California law: WARNING - This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available, Period

