


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	642-AP5	8' Champion Perforated Access Table	1
2	622-0P3	6' Champion Perforated Seat/Back	2
3	634-010	Free Standing Table Stand For 10" Seats	2
4	634-013A	Table Brace	2
5	516-058	3/8"x1-1/2" SS Hex Bolt	16
6	516-028	3/8" SS Nylock Nut	16
7	516-023	3/8" SS Flat Washer	32

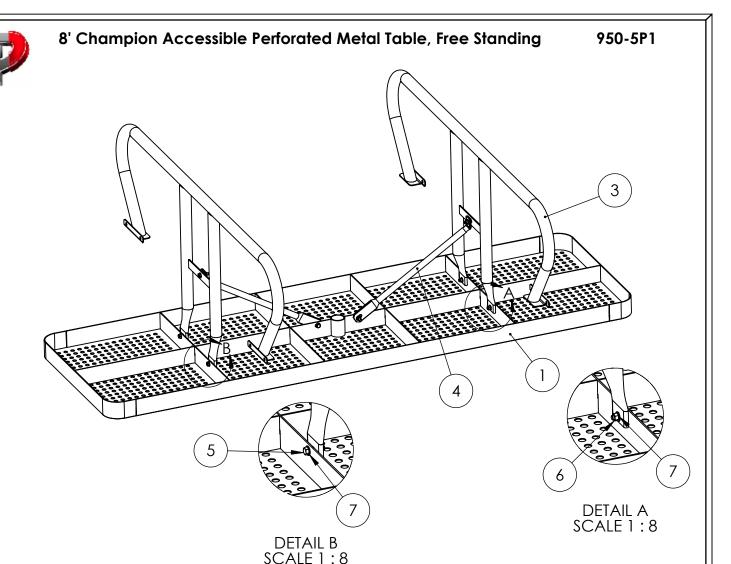







Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Level
- Impact Gun (Optional)
- Dril

This product uses Hardware Pack HWPK02 (you may receive extra hardware)

16 qty. 3/8" x 1-1/2" SS Hex Bolt 16 qty. 3/8" SS Nylock Nut 32 qty. 3/8" SS Flat Washer

- 1. Drill out plastic from all mounting holes using a 7/16" drill bit.
- 2. Flip the table top upside down as shown above and attach the stands loosely using fixings provided. Do not tighten up bolts at this stage.
- 3. Attach the braces as shown above.
- 4. Flip the table back to the correct position and attach the seats to the stands.
- 5. Level the seats and table then tighten up all bolts.

Periodic check of bolts tightness reccommended

